



OPAL-RT



OP7000 Simulator User Guide







Published by

OPAL-RT Technologies, Inc. 1751 Richardson, suite 2525 Montreal, Quebec, Canada H3K 1G6

www.opal-rt.com

SYMBOL DEFINITIONS

The following table lists the symbols used in this document to denote certain conditions:

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration
	TIP: Identifies advice or hints for the user, often in terms of performing a task
	REFERENCE _ INTERNAL: Identifies an additional source of information within the bookset.
CAUTION	Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.
	Indicates a situation where users must observe precautions for handling electrostatic sensitive devices.
	CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
	WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

CONTENTS

OP7000 SIMULATOR	9
INTRODUCTION	9
DESCRIPTION	10
<i>Standard and Optional Boards.....</i>	<i>11</i>
OP7000 FRONT INTERFACE	12
OP7000 REAR INTERFACE.....	13
INSTALLATION AND CONFIGURATION	14
RECEIVING AND VERIFICATION	14
<i>Standard Hardware</i>	<i>14</i>
BASIC SYSTEM CABLING	14
CONNECTING MONITORING DEVICES.....	14
POWER-UP PROCEDURE.....	15
OP7161 FPGA BOARD	16
OP7220 CARRIER BOARD	17
MONITORING INTERFACE.....	17
<i>RJ45 Monitoring Connectors.....</i>	<i>17</i>
<i>RJ45 Channel Assignments</i>	<i>17</i>
<i>Installing a New Board</i>	<i>18</i>
<i>Changing Mezzanines.....</i>	<i>19</i>
FRONT AND REAR BOARD CONNECTIONS	19
OP7220 COMMUNICATION DIAGRAM	20
OP7461 PCIE BOARD.....	21
MODULE INSTALLATION	21
CIRCUIT LAYOUT DIAGRAMS.....	21
OP7000 SPECIFICATIONS	22
SPECIAL NOTES.....	22
OP5330 DIGITAL TO ANALOG CONVERTER	23
DESCRIPTION	23
REQUIREMENTS.....	23
<i>Software.....</i>	<i>23</i>
<i>Hardware.....</i>	<i>23</i>
FEATURES.....	23
OFFSET AND GAIN CALIBRATION.....	23
MODULE INSTALLATION AND CONFIGURATION	24
CIRCUIT LAYOUT DIAGRAMS.....	24
SCHEMATICS.....	25
TYPICAL APPLICATIONS	25

OP5340 ANALOG TO DIGITAL CONVERTER (0.5 MSPS)	27
DESCRIPTION	27
REQUIREMENTS	27
<i>Software</i>	27
<i>Hardware</i>	27
FEATURES	27
OFFSET AND GAIN CALIBRATION	27
INSTALLATION AND CONFIGURATION	28
CIRCUIT LAYOUT DIAGRAMS	28
SCHEMATICS	29
INPUT GAIN SELECTION	29
INPUT GAIN CALCULATIONS	30
OP7353 DIGITAL MONITORING BOARD	33
DESCRIPTION	33
CIRCUIT LAYOUT DIAGRAMS	33
OP7811 PASSTHROUGH MODULE	35
DESCRIPTION	35
INSTALLATION	35
CIRCUIT LAYOUT DIAGRAM	35
CONNECTOR PIN ASSIGNMENTS	36
SPECIFICATIONS	36
OP7816 16 DIN SIGNAL CONDITIONING MODULE	37
DESCRIPTION	37
FEATURES	37
INSTALLATION	37
MODULE IDENTIFICATION AND INITIALISATION	38
CIRCUIT LAYOUT DIAGRAM	38
INPUT INTERFACES	38
TYPICAL APPLICATIONS	39
CONNECTOR PIN ASSIGNMENTS	41
SPECIFICATIONS	41
OP7817 16 DOUT SIGNAL CONDITIONING MODULE	43
DESCRIPTION	43
FEATURES	43
INSTALLATION	43
MODULE IDENTIFICATION AND INITIALISATION	43
CIRCUIT BOARD LAYOUT DIAGRAMS	44
OP7817 PIN ASSIGNMENTS	45
DB37 CONNECTOR	45
GENERAL SPECIFICATIONS	45
ELECTRICAL SPECIFICATIONS	46
5 V Option	46
12 V Option	46
24 V Option	46

OP7818 16 AIN SIGNAL CONDITIONING MODULE	47
DESCRIPTION	47
FEATURES.....	47
INSTALLATION	47
MODULE IDENTIFICATION AND INITIALISATION.....	48
CIRCUIT LAYOUT DIAGRAMS.....	48
JUMPER AND SWITCH POSITIONS	49
OPTIONAL MEZZANINE BOARD	50
TYPICAL APPLICATION DIAGRAMS.....	51
VOLTAGE MODE DIAGRAM	51
CURRENT MODE DIAGRAM	51
<i>Resistive Sensor Mode Diagram.....</i>	<i>52</i>
CONNECTOR PIN ASSIGNMENTS.....	54
SPECIFICATIONS	54
OP7832 SYNCHRONIZATION MODULE	55
DESCRIPTION	55
FEATURES.....	55
INSTALLATION	56
USER INTERFACES.....	56
STATUS LEDS	56
CONNECTORS	57
CIRCUIT LAYOUT DIAGRAM	58
SPECIFICATIONS	58
SPECIFICATIONS	59
OP7000 SIMULATOR SPECIFICATIONS.....	59
OP5330 DIGITAL TO ANALOG CONVERTER	59
OP5340 ANALOG TO DIGITAL CONVERTER	60
OP7353 16 CHANNEL DIGITAL MONITORING (FRONT)	61
OP7812 16 DIGITAL INPUTS	61
TROUBLESHOOTING	63
LIMITED WARRANTY	65
LIMITED WARRANTY.....	65
RETURN POLICY	65
EXCLUSIONS.....	65
WARRANTY LIMITATION AND EXCLUSION	66
DISCLAIMER OF UNSTATED WARRANTIES	66
LIMITATION OF LIABILITY	66

OP7000 SIMULATOR

INTRODUCTION

The OP7000 is an ultrafast simulator that can use multiple FPGA to achieve next generation simulation speed. It is designed to be used with a target connected by PCIe, as shown in Figure 1.

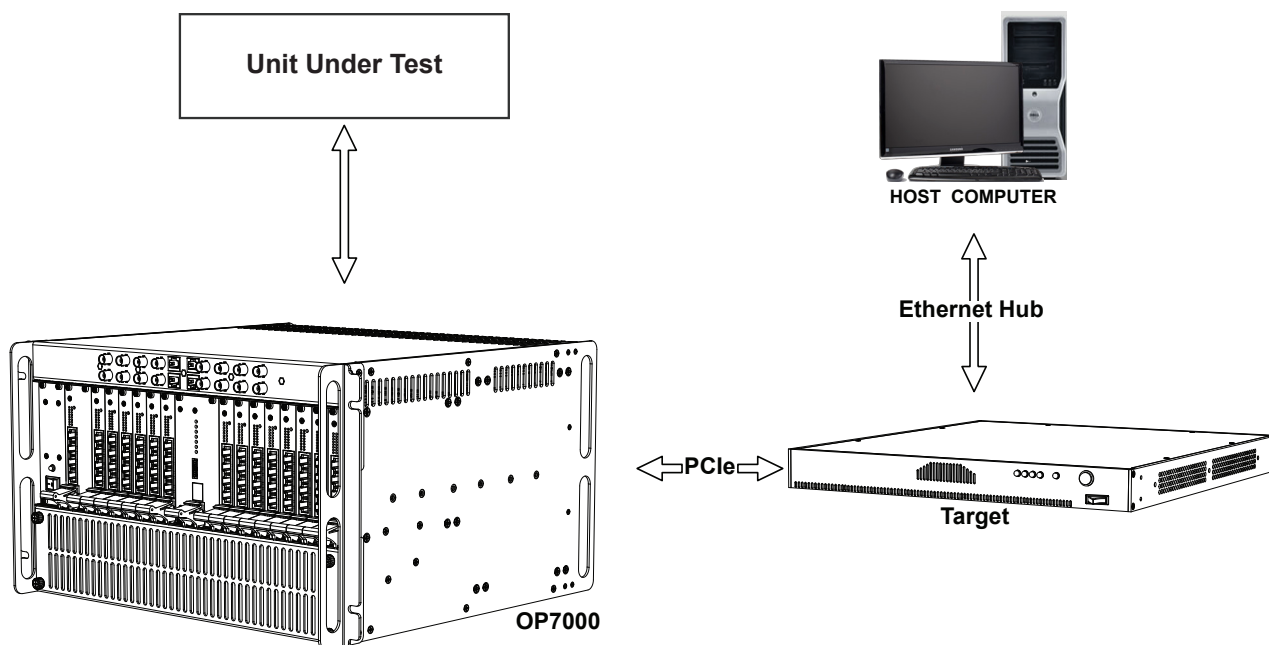


Figure 1: OP7000, sample system architecture

The OP7000 simulator is equipped with standard interfaces: the OP7160-1 (130T) or the OP7161-1 (240T) are the primary FPGA boards that occupy the center slot in the chassis and the OP7461 is the PCIe communication board that connects the OP7000 simulator to the target.

The design makes it easier to use with standard connectors (DB37, RJ45 and BNC) without the need for input/output adaptors and allows quick connections for monitoring. The front of the chassis provides the monitoring interfaces and monitoring connectors, while the back of the chassis provides access to the PCIe communication connections, all I/O connectors and power cable.

DESCRIPTION

The OP7000 is available in a number of different configurations that make it easier to integrate into your environment. Select any combination of signal conditioning boards (up to 16 DI/O, 8 AI/O or a combination of 8 DI/O and 4 AI/O) or select up to 8 FPGA secondary boards (for pure computation with no I/Os).

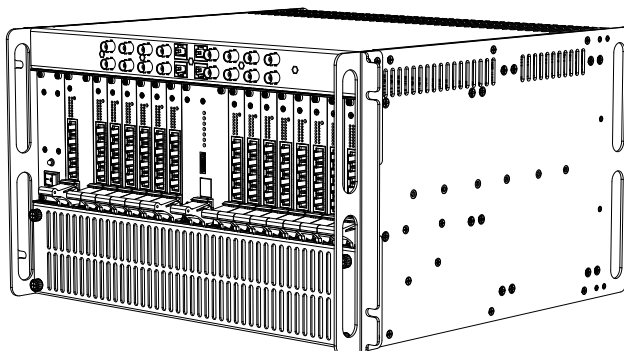


Figure 2: OP7000 (front)

The rear of the OP7000 contains the connectors for the PCIe link to the target and for signal conditioning from the target and to the unit under test.

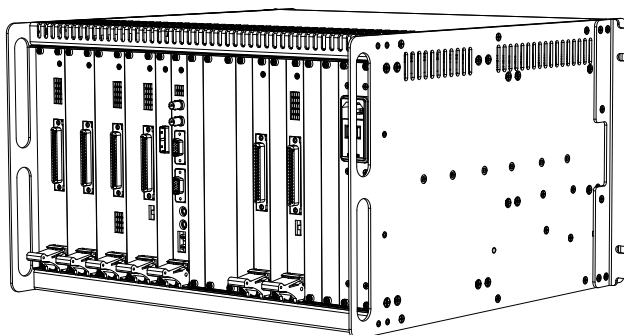


Figure 3: OP7000 (rear)

Standard and Optional Boards

The front section contains the carrier boards and conditioning modules with connectors for monitoring and the rear section contains conditioning boards for connections from the unit under test.

FRONT BOARDS	DESCRIPTION	REAR BOARDS	DESCRIPTION
ANALOG I/Os			
OP7220	Universal Carrier	OP7811	OP7000_Rear_Interface_DB37 (Passthrough)
	with OP5330 or OP5340 mezzanine card	OP7818 - 2	OP7000 Rear Analog Input conditioning for OP5340, Voltage or Current mode, 16ch DB37 connectors
	Required for use of back analog IO cards	OP7819 - 2	OP7000 Rear Analog Output conditioning for OP5330, Voltage or Current mode, 16ch DB37 connectors
		OP78E0	OP7000_6U_AIO_Carrier_DB37 for Type E Modules (Max of 4 modules per carrier)
DIGITAL I/Os			
OP7353 or		OP7816 - 2	OP7000 Rear Opto-Isolated Digital Input : 16-Din DB37 connector
		OP7817 - 2	OP7000 Rear Opto-Isolated 16-Dout, Push-Pull 5V to 30V, DB37 connector
OP7161-2	Secondary V6 (240T) (slots 9, 11, 13 only)	OP7820	OP7000 Rear 8TX and 8RX DC to 50 MBd Fiber Optic link, 650nm
	For distributed FPGA simulations	OP7821	OP7000_Rear_16Dout_SSR_250V_200mA (Normally Open Relay)
	In most cases, the corresponding back IO card is driven	OP7822	OP7000_Back_6TX_6RX_Fiber_Optic_link_820nm
	by the Primary FPGA	OP7823	OP7000 Rear 16RX DC to 50 MBd Fiber Optic link, 650nm
		OP7824	OP7000 Rear_16TX_DC_to_50_MBd_Fiber_Optic_link_650nm
OP716X-1	Primary V6 (130T or 240T)	-	
		OP7832	OP7000 Rear Synchronization card (Between OP7000, OP5600 , Wanda, ...)
		OP7461	Communication Interface PCIe 4X (match with 126-0347)

Table 1: OP7000 board type pairings

*The OP7161 and OP7461 boards are the core of the OP7000 and are not optional. Consult your sales representative for the complete list of available signal conditioning boards.

NOTE Boards used in the back of the unit must correspond to the type of boards used in the front. Example: if an Analog Out board is used in front slot #1, then a matching Analog out board must be used in the rear slot #1.

OP7000 FRONT INTERFACE

The interfaces provided on the OP7000 simulator may vary depending on the system configuration.

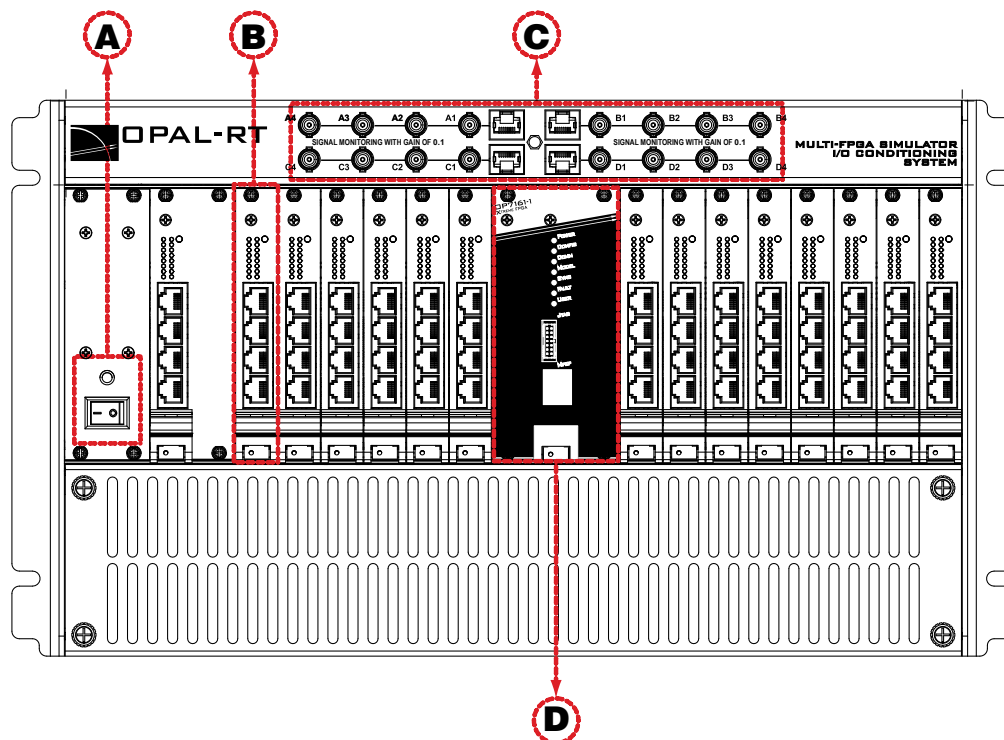


Figure 4: OP7000 front connector panels

- A. Power switch with LED indicator.
- B. Carrier board (OP7220) interfaces:
 - 16 red LEDs (8 pairs). Light intensity is directly commensurate to voltage (the higher the voltage, the brighter the LED intensity)¹.
 - One Status LED with variable color (see table for display description)

LED	Description
Red	Insufficient power voltage for digital board.
Blinking red	Insufficient power voltage for analog board
Blinking orange	No upload of mezzanine.
Orange	Sanity signal absent
Yellow	All statuses normal.
Blinking yellow	Error in analog board even slot

Table 2: Carrier board LED functions

- One column of 4 RJ45 connectors provide connections to monitor output from mezzanine I/O boards. Each connector represents 4 channels (see “Installation and Configuration” for more detailed information).

¹ LED threshold is 1V

C. Monitoring connectors

D. FPGA board:

- JTAG connector for programming functions. Reserved for OPAL-RT technicians' use only.
- One RJ45 connector. DISABLED, for OPAL-RT's technicians' use only.
- 7 LED indicators:

Position	LED	Description
1	Power	On (green) indicates that the unit is powered up.
2	Config	Green indicates that a user defined configuration (bitsream) is running. Yellow indicates that the safe, default configuration (bitsream) is running. Flashing indicates the configuration is paused. Off indicates that there is no configuration available..
3	Comm	On (green) indicates communication with the PC is in progress.
4	Model	On indicates model in use.
5	Sync	Green indicates Master synchronisation in progress Yellow indicates Slave synchronisation in progress
6	Fault	Red indicates a fault.
7		User defined functions Green/Yellow

Table 3: FPGA board LED functions

OP7000 REAR INTERFACE

The connectors on rear modules are DB37F by default. BNC may be installed on custom boards and must be specified at the time of the order.

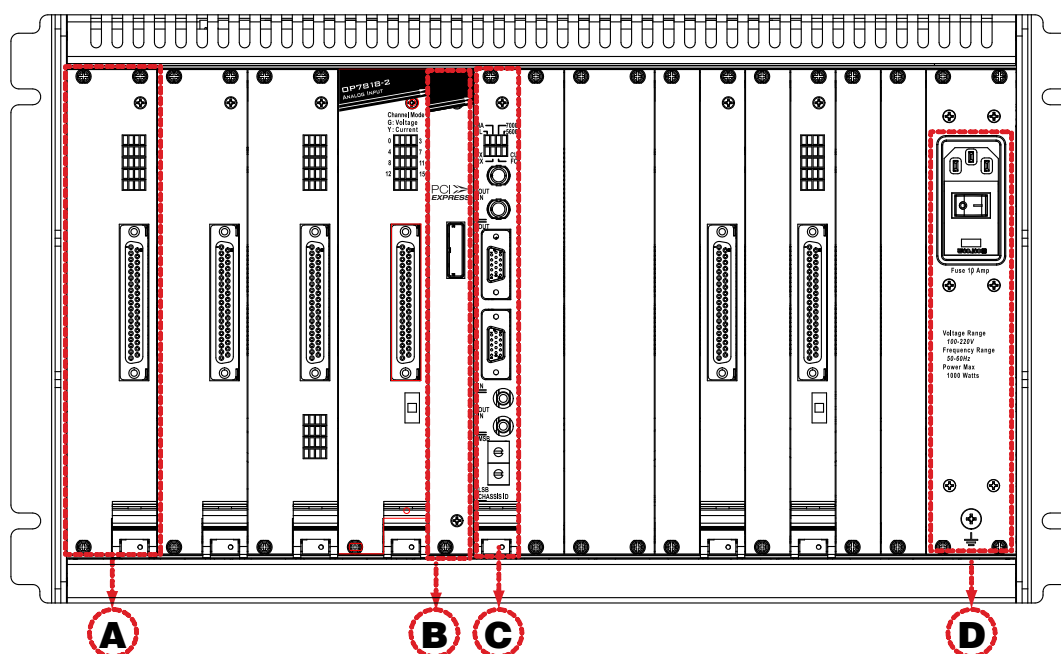


Figure 5: OP7000 rear connector panels

- A. DB37F I/O connectors and status LEDs (see each board's pin assignments section for details).
- B. PCIe communication connector.
- C. Synchronization board (to synchronize with external OP5600, OP7000 chassis)
- D. Power connection port and ground screw.

INSTALLATION AND CONFIGURATION

This section provides a description of the hardware included with the basic simulation system (with the OP7000 at its core) and how to connect the various cables between devices.

Before beginning to install your system, verify that all the standard (and optional) components are present.

RECEIVING AND VERIFICATION

After opening the package, remove the equipment and components. Make sure that all the items described in “Standard Hardware” are actually in the box and are undamaged.

Standard Hardware

The OP7000 real-time simulator includes the following basic hardware:

Item	Description	Part Number
OP7000 simulator	Simulator FPGA and PCIe boards and any other optional boards	N/A
OPAL-RT target		
System Integration binder	RT-LAB software CD O/S CD (Redhat or QNX) Documentation CD	N/A
PCIE cable		
BNC cables (4)		
RJ45 cables (4)	61cm (24”) RJ45 cables	C-02B-CAT6
Power cable	1.83 m (6') power cord, black (10A 125V)	CPC06



OPAL-RT strongly recommends the use of anti-static wrist straps whenever handling any electronic device provided by OPAL-RT. Damage resulting from electrostatic charges will not be covered by the manufacturers warranty.

BASIC SYSTEM CABLING

The design of the simulation system includes quick, standardized I/O connections (either BNC or DB37F) and RJ45 connections for monitoring each channel individually.

The simulator is preconfigured according to your specifications and installation is as easy as mounting the simulator and connecting the appropriate cables from the simulator to the target.

CONNECTING MONITORING DEVICES

The OP7000 simulator offers quick, single-ended connections, through RJ45 and BNC connectors, to any monitoring device (i.e. oscilloscope, etc.). These BNC jacks let you monitor 4 channels individually. Simply follow these instructions (as illustrated in Figure 6):

CAUTION	Only connect RJ45 cables from upper section (A) monitoring jacks to lower section monitoring panel (B, as shown). Connecting any other cable or device may result in damage to the equipment.
----------------	--

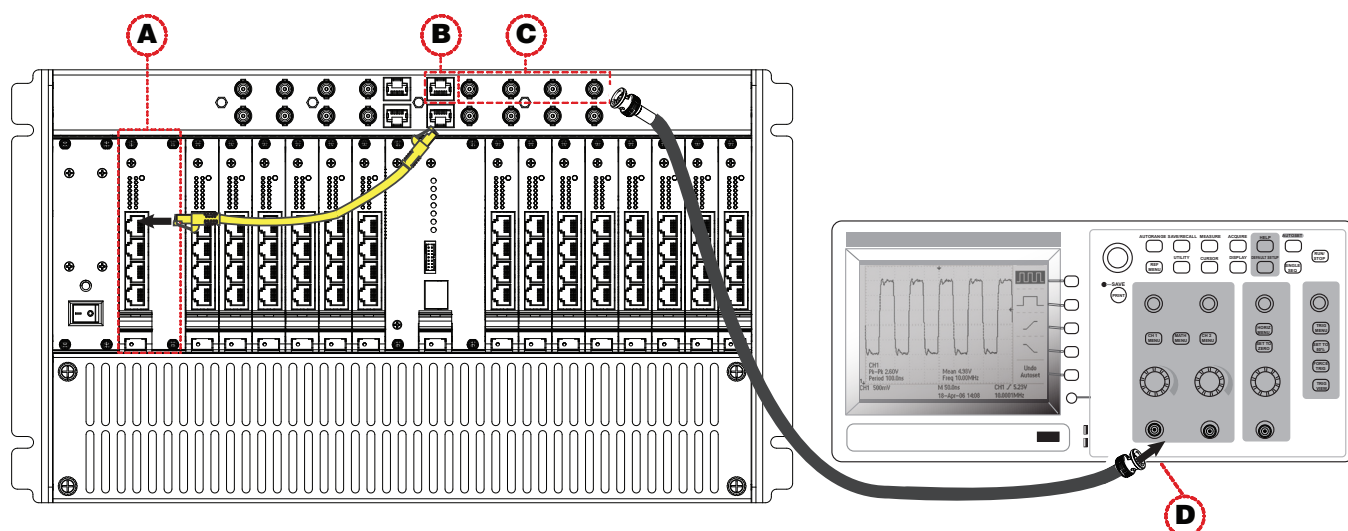


Figure 6: How to connect cables for monitoring

1. Connect one end of the RJ45 cable to the desired channels (A).
2. Connect the other end of the RJ45 cable to the monitoring connector (B)
3. Connect a BNC cable to a BNC jack (C) and connect the other end of the cable to the desired monitoring device. The BNC jacks each connect to one of the 4 channels of the RJ45 Connector (A). In the example shown in Figure 10, the RJ45 cable is connected to channels 00-03. The mini-BNC cable jacks, identified as A, B, C, D, represent each channel in the following order; A = channel 0, B = channel 01, C = channel 02, D = channel 03 (see Figure 10 for illustration).
4. Connect a mini BNC cable to the desired channel and connect the other end to your monitoring device (oscilloscope shown, D).

ATTENTION Buffer amplifiers have a Gain of 0.1.

POWER-UP PROCEDURE

The following sequence must be respected to ensure that the system functions properly:

1. Ensure that power cables from the OP7000 and other devices are connected to grounded, protected (see red label on power cable).
2. Ensure that the PCIe cable is connected to both the back of the OP7000 and the real-time PC.
3. Turn the OP7000 ON
4. Plug the real-time computer network cable in the Ethernet hub.
5. Turn the real-time computer ON

OP7161 FPGA BOARD

This board is essentially a digital I/O driver. The FPGA signals drive signal conditioning hardware (consult your custom system integration documentation for the list of boards included with your simulator), other communication hardware and all dedicated hardware using SPI or other interfaces.

The centre FPGA is the main component of the OP7000 and must be used with the FPGA mezzanine. However, if additional FPGA boards (secondary) are used in the OP7000, these additional boards do not require the FPGA mezzanine.

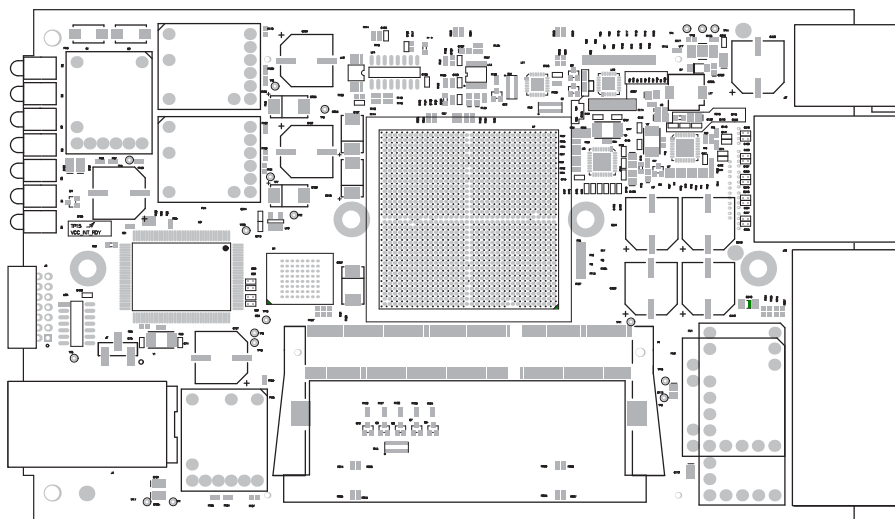


Figure 7: OP7161-1 primary FPGA board, with mezzanine

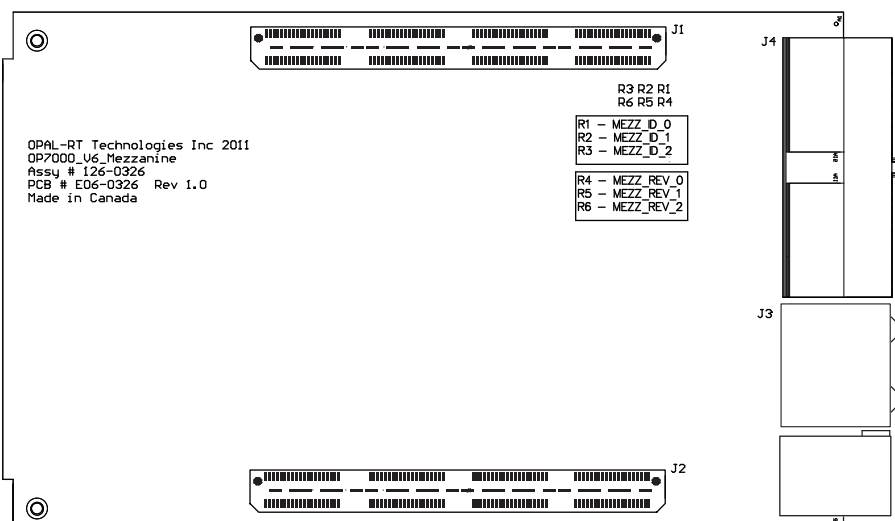


Figure 8: OP7161-2 secondary FPGA board, without mezzanine

OP7220 CARRIER BOARD

The OP7220 carrier board is a part of the OP7000 series of modules for OPAL-RT's state of the art OP7000 simulator. It is designed for use with OPAL-RT's mezzanine signal conditioning boards (OP5330, OP5340).

The OP7220 provides the interface required for the mezzanine signal conditioning board to communicate with the FPGA board (see "OP7220 COMMUNICATION DIAGRAM"). The carrier board also provides the connectors that allow monitoring of individual channels and a series of LED indicators to display the status for the condition boards.

MONITORING INTERFACE

RJ45 Monitoring Connectors

Each front mezzanine interface has a column of RJ45 connectors, representing all 16 channels divided into 4 channels per jack, as shown in Figure 9.

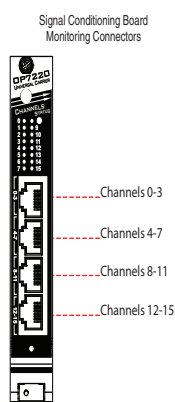


Figure 9: Carrier board RJ45 connections

RJ45 Channel Assignments

Each of the carrier's RJ45 connectors, (shown in Figure 9) can be connected to the BNC monitoring connectors on the front of the OP7000 that enable single channel monitoring, as illustrated below.

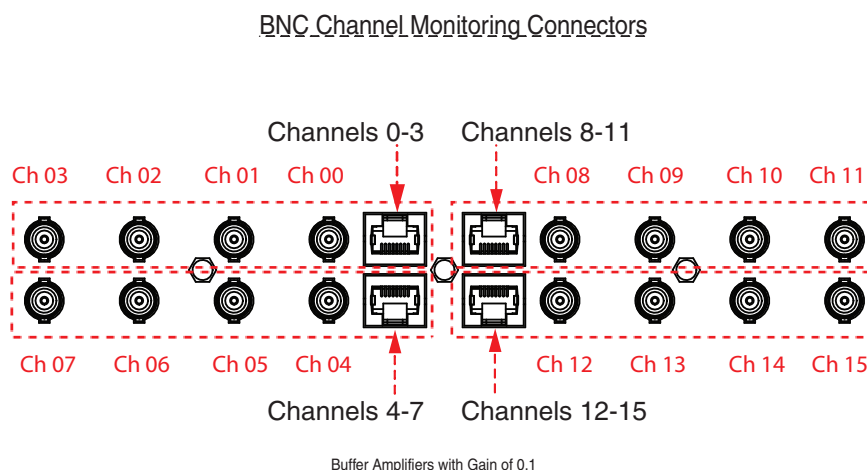


Figure 10: RJ45 channel assignments

ADDING BOARDS



OPAL-RT strongly recommends the use of anti-static wrist straps whenever handling any electronic device provided by OPAL-RT. Damage resulting from electrostatic charges will not be covered by the manufacturers warranty.

Depending on your specific needs, you may wish to install additional conditioning or FPGA boards in the OP7000 simulator. The front of the simulator contains designated slots for a total of 8 additional boards (the centre slot is reserved for the main FPGA board). Slots are color coded to indicate the type of board that can be installed in the front:

- Yellow: Odd numbered slots can accept OP7220 carrier boards, OP7353 digital monitoring board and FPGA boards (maximum 8 boards). When these slots are used, the next (even numbered) slot on the right cannot be used.
- Black: Even numbered slots. Only OP7353 digital monitoring boards can be installed (maximum 8 boards).

Installing a New Board

1. Disconnect simulator power supply.
2. Remove blank plate from desired slot.
3. Insert desired mezzanine board on carrier board (optional, see “CHANGING MEZZANINES”).
4. Gently slide new board into slot until locking tab clicks into place and connector slides snugly into the connector on the midplane (see Figure 12 and Figure 13).
5. Reconnect power supply.

The following image illustrates how simple it is to insert hardware components into the OP7000 chassis.

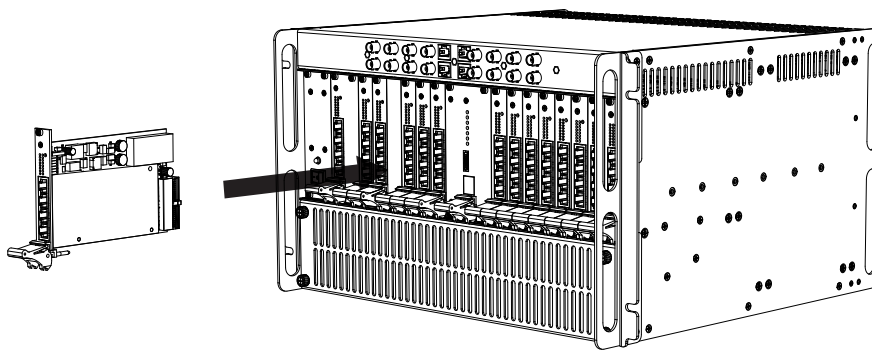


Figure 11: Inserting the carrier board


CAUTION

The system must be powered down before changing boards. Failure to do so may damage the equipment.

Changing Mezzanines

The OP7220 is the carrier board on which the mezzanine conditioning boards are installed. Installation is simple and once the conditioning board is firmly pressed into place, the carrier board is ready to be installed in the OP7000.

Two polarized connectors fasten the module and four screws affix it for a more secure connection to the carrier. Make sure that the connectors are properly aligned; they should fit together easily. Use light pressure to push the mezzanine board into the carrier board.

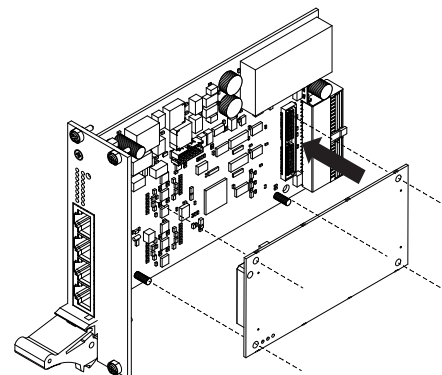

FRONT AND REAR BOARD CONNECTIONS

Special attention must be paid to the types of boards that are installed in each of the slots at the front and the rear of the unit. If an analog board is installed in slot 1 at the front of the unit, then an analog conditioning board **MUST** be installed in slot 1 at the rear of the unit.

Each slot has a track that guides the board into the exact alignment for the connector

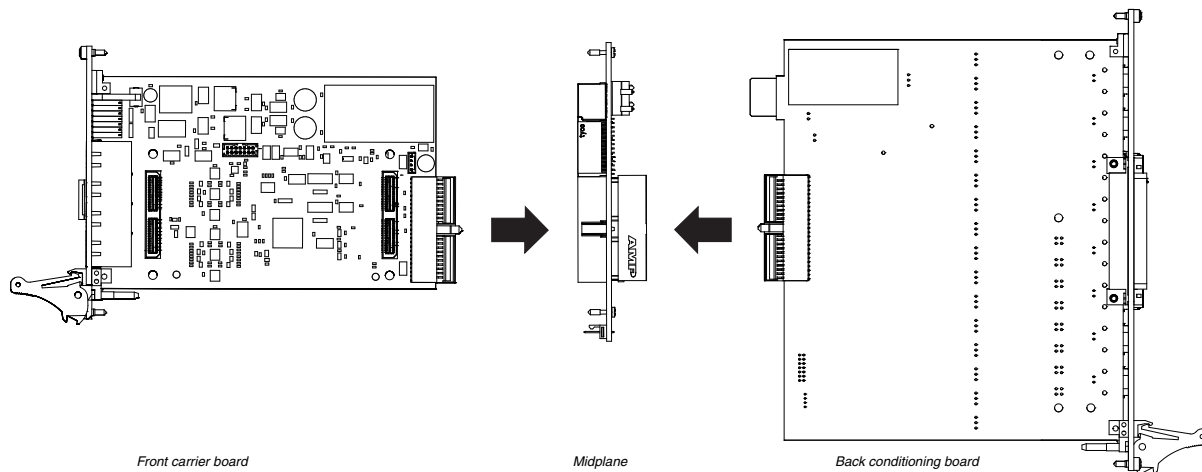


Figure 12: Connecting boards to midplane

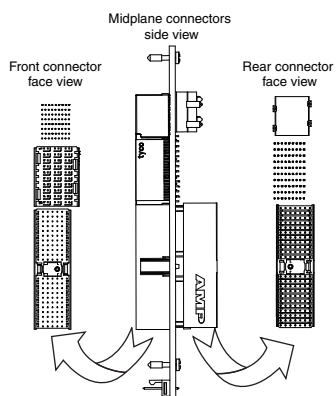


Figure 13: Midplane connectors - face view

OP7220 COMMUNICATION DIAGRAM

The universal carrier connections allow signals to travel from front to back, in from and returning out to external devices. These signals travel according to a specific architecture, as shown in Figure 14.

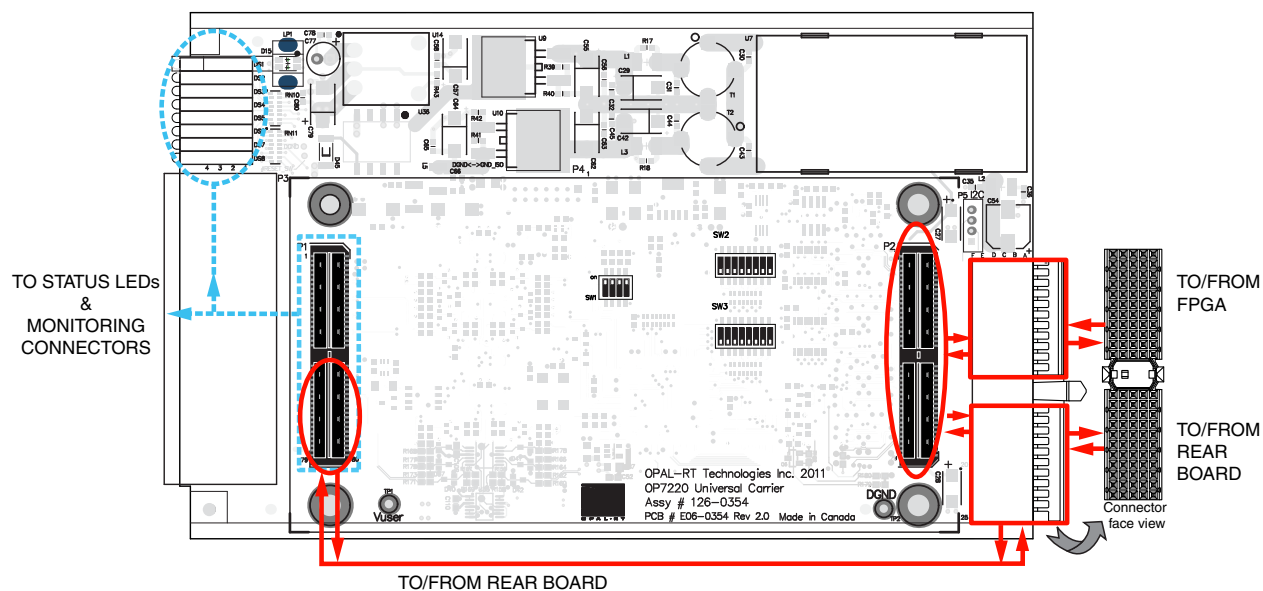


Figure 14: OP7220 connection flow

Consult the “OP7000 board type pairings” on page 11 section for details on rear channel to pin associations. Consult the “MONITORING INTERFACE” section for details on front channel to connector associations.

OP7461 PCIE BOARD

This board is required to use the OP7000; it creates the communication link between the front FPGA board and the real-time computer running the RT-LAB model.

MODULE INSTALLATION

The OP7461 PCIe Module must be inserted into the appropriate slot in the rear of the OPAL-RT simulator, the slot that corresponds to the front FPGA board. Make sure that the card is properly aligned, using the guide tracks, before pressing into place.

CIRCUIT LAYOUT DIAGRAMS

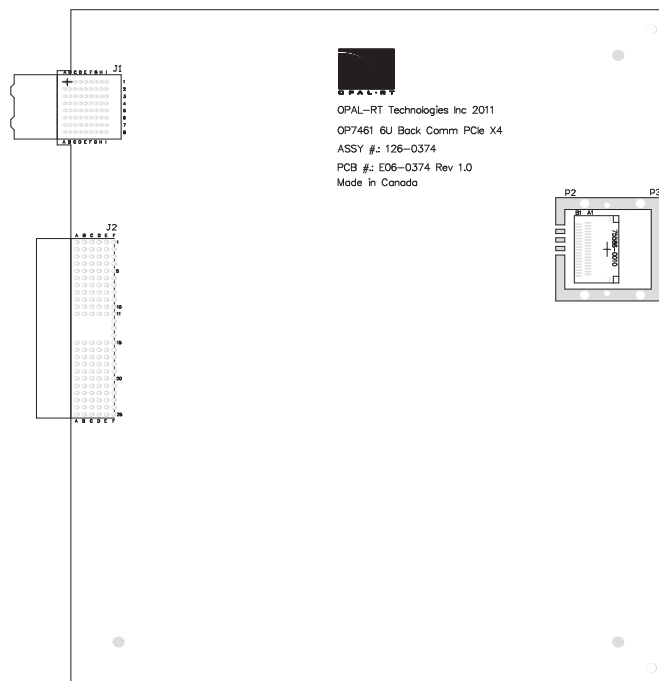


Figure 15: OP7461 PCIe communication module

OP7000 SPECIFICATIONS

Product name	OP7000 Simulator
Power supply	Universal input and active power factor correction 650W continuous power DC to DC converters for analog voltage
I/O connectors	See the specifications for each board.
Monitoring connectors	RJ45 on front modules RJ45 and mini-BNC on OP7000 front panel
Dimensions (HxWxD)	26.67 x 48.26 x - cm (10.5" x 19" x ")
Weight	9 to 14 Kg, depending on options installed.
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90% non-condensing
Maximum altitude	2000 m (6562 ft.)

SPECIAL NOTES

- NOTE:
- The OP7000 can only be used with RT-LAB version 10.4.0. If your version of RT-LAB is older than 10.4.0, you will need to update the software.
 - OP7160/OP7161 Board Index values may differ between RT-LAB 10.4.0, RT-LAB 10.4.9 and RT-LB 10.5.0
 - Default value, when no OP7832 is present, is 255 in RT-LAB 10.5.0, instead of 31 in RT-LAB 10.4.9 and 0 in RT-LAB 10.4.0.
 - Actual values when OP7832 is present will depend on the rotary switch position.
 - The O716x OpCtrl blocks in your models may need to be updated when updating RT-LAB.

OP5330 DIGITAL TO ANALOG CONVERTER

DESCRIPTION

The OP5330 digital to analog converter (DAC) provides 16 single-ended digital output channels. Each channel uses a 16-bit resolution digital-to-analog converter. It is a part of the OP5000 series of optional modules for OPAL-RT's state of the art HIL (hardware-in-the-loop) systems, intended for use with OPAL-RT carrier boards (OP5130, OP5220, OP5222, OP5600, OP6228).

Each OP5330 can sample up to 1 MS/s, giving a total throughput of 8 MS/s, all channels are simultaneously sampled. The onboard EEPROM provides offset and gain data adjustment written during the calibration process, as well as over-voltage protection.

By default, the maximum output signal is set to ± 16 volts.

REQUIREMENTS

Software

- RT-LAB 8.4.0 and higher

Hardware

- OPAL-RT simulator:
 - OP7000 series simulator
 - OP5600 series simulator
 - OP5000 series of hardware-in-the-loop simulators
 - OPAL-RT I/O expansion box (only for use with OPAL-RT simulators)
- OPAL-RT carrier board:
 - OP5130, OP5220, OP5222, OP5600, OP6228, OP7220

FEATURES

- 16 single-ended analog output channels
- All outputs are sampled simultaneously at up to 1 MS/s
- 16 bit resolution
- ± 15 V voltage range output
- ± 15 mA maximum current per channel

OFFSET AND GAIN CALIBRATION

The OP5330 contains a serial EEPROM to store the module identification, calibration information and other important information. Each OP5330 is factory calibrated after assembly; during calibration, gain and offset are adjusted to ensure accurate target output values at ± 20 mV noise and offset.


MODULE INSTALLATION AND CONFIGURATION

The OP5330 digital to analog converter must be inserted into the OPAL-RT carrier board using great care. Two polarized connectors fasten the module in the suitable position and four screws affix it for a more secure connection to the carrier.

Make sure that the connectors are properly aligned; they should fit together easily. Use light pressure to push the OP5330 board into the carrier board.

The OP5330 module can only be used with OPAL-RT's carrier boards (OP5130, OP5220, OP5222, OP5600, OP6228 and OP7220). Its identification on the carrier board is determined by the FPGA controller bitstream.

OP5330 connector

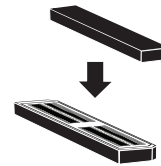

Carrier board connector

CIRCUIT LAYOUT DIAGRAMS

When the OP5330 is installed on the carrier board, only the top of the circuit board is visible, as shown in Figure 16. The connectors are located on the bottom of the board (see Figure 17) and fit snugly into the connectors on the carrier.

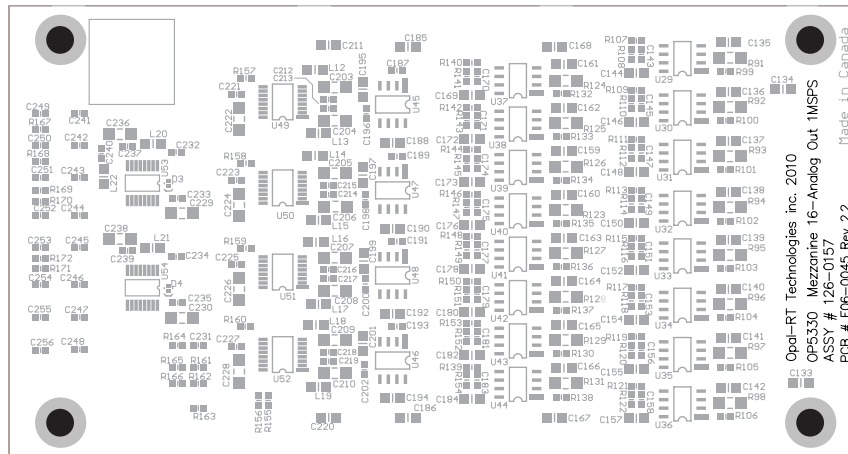


Figure 16: OP5330 module (top view)

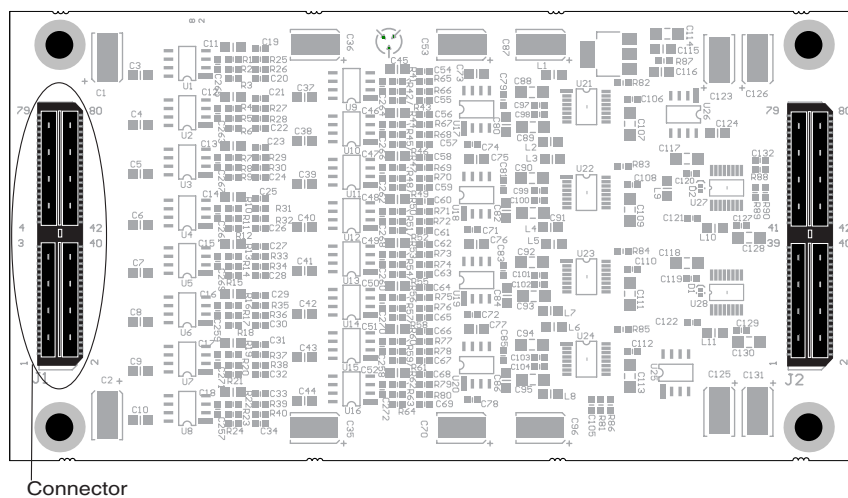


Figure 17: OP5330 module (bottom view)

SCHEMATICS

Figure 18 represents a simplified schematic of one OP5330 module channel. It is composed of three stages: the first stage consists of one gain DAC and one offset DAC; the second stage consists of a signal DAC with an operational amplifier that allows for gain adjustments; the third stage consists of an operational amplifier that receives final signal value and integrates the offset.

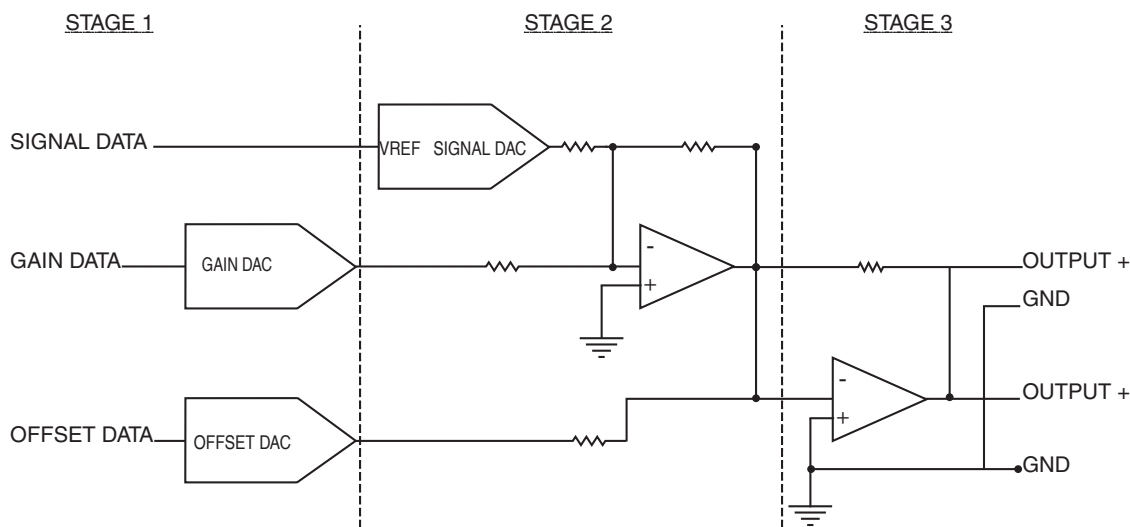


Figure 18: Output DAC circuit

TYPICAL APPLICATIONS

The following diagram provides an example of a typical application using the OP5330.

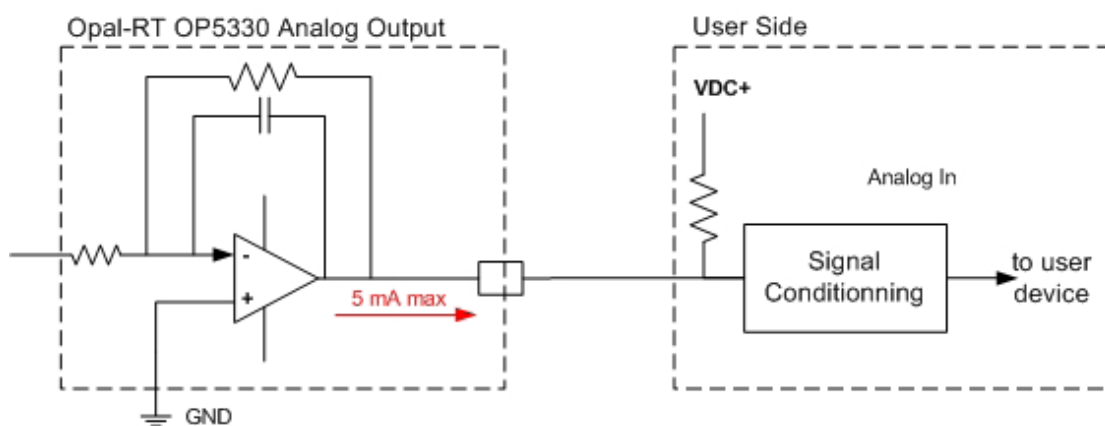


Figure 19: OP5330 typical application

OP5340 ANALOG TO DIGITAL CONVERTER (0.5 MSPS)

DESCRIPTION

The OP5340 Analog to Digital converter (ADC) is a part of the OP5000 series of optional modules for OPAL-RT's state of the art HIL (hardware-in-the-loop) systems, intended for use with OPAL-RT carrier boards (OP5130, OP5220, OP5222, OP5600, OP6228). Designed for OPAL-RT's simulation systems, the OP5340 converts analog signals to digital.

Each ADC can sample up to 500 kS/s, giving a total throughput of 8 MS/s, all channels are simultaneously sampled. The on-board EEPROM provides offset and gain data adjustment written during the calibration process, as well as over-voltage protection.

The OP5340 module provides 16 differential analog input channels. Each channel uses a 16-bit resolution analog-to-digital converter. The OP5340 module also has input signal conditioning capabilities that allow the user to apply a signal range from $\pm 20\text{V}$ up to $\pm 120\text{V}$ on the inputs. By default, the maximum input signal is set to ± 20 volts.

REQUIREMENTS

Software

- RT-LAB 8.4.0 and higher

Hardware

- OPAL-RT simulator:
 - OP7000 series simulator
 - OP5600 series simulator
 - OP5000 series hardware-in-the-loop simulator
 - OPAL-RT I/O expansion box (only for use with OPAL-RT simulators)
- OPAL-RT carrier board:
 - OP5130, OP5220, OP5222, OP5600, OP6228, OP7220

FEATURES

- 16 differential analog input channels
- All inputs are sampled simultaneously at up to 500 kSPS
- 16 bit resolution
- 500 K Ω input impedance
- ± 20 V input voltage range
- ± 240 input range up to 120V

OFFSET AND GAIN CALIBRATION

The OP5340 contains a serial EEPROM to store the module identification, calibration information and any other important information. Each OP5340 module is calibrated after assembly; during calibration, gain and offset are adjusted to ensure accurate target output values at ± 20 mV noise and offset.


INSTALLATION AND CONFIGURATION

The OP5340 analog to digital converter module must be inserted into the OPAL-RT carrier board using great care. Two polarized connectors fasten the module in the suitable position and four screws affix it for a more secure connection to the carrier.

Make sure that the connectors are properly aligned; they should fit together easily. Use light pressure to push the OP5340 board into the carrier board.

The OP5330 module can only be used with OPAL-RT's carrier boards (OP5130, OP5220, OP5222, OP5600, OP6228 and OP7220). Its identification on the carrier board is determined by the FPGA controller bitstream.

OP5330 connector

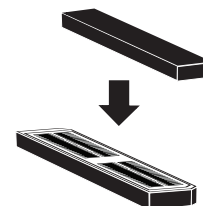

Carrier board connector

CIRCUIT LAYOUT DIAGRAMS

When the OP5340 is installed on the carrier board, only the top of the circuit board is visible, as shown in Figure 20. The connectors are located on the bottom of the board (see Figure 21) and fit snugly into the connectors on the carrier board. Users may add resistors to change voltages for specific needs, according to the values provided in Table 4 (though factory customized orders are recommended).

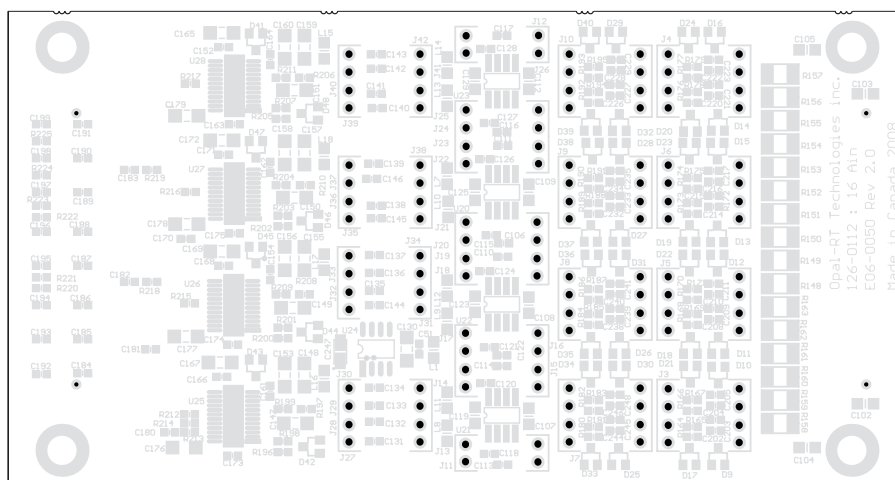


Figure 20: OP5340 analog to digital converter module (top view)

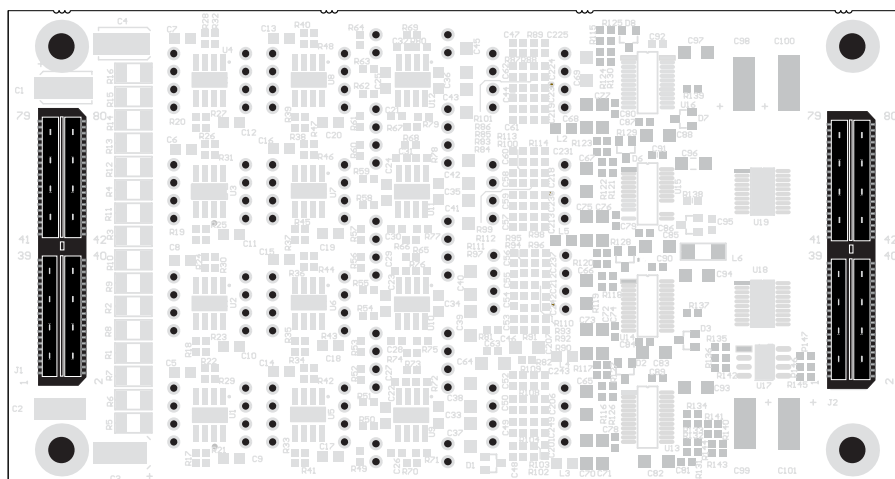


Figure 21: OP5340 Analog to digital converter module (bottom view)

SCHEMATICS

Figure 22 represents a simplified schematic of one OP5340 module channel. It is composed of three stages: the first stage consists of one operational amplifier that works in differential input mode and permits gain adjustment; the second stage, the level shifter, forms the signal for the A/D converter input; the third stage occurs after the conversion to the digital type, as the signal is sent to the carrier board.


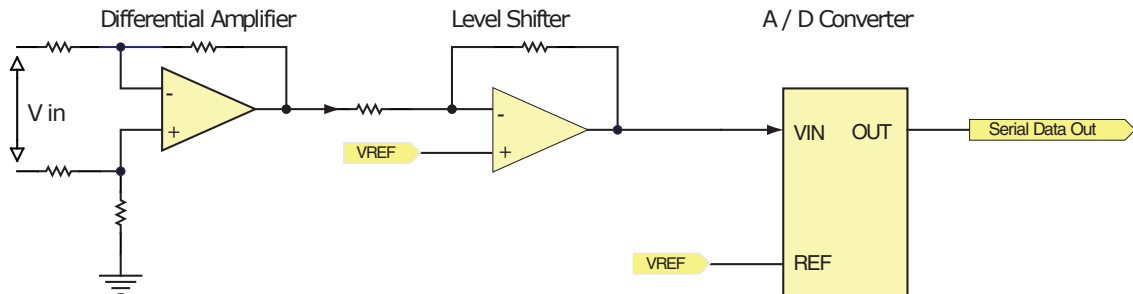


Figure 22: Differential input ADC circuit

INPUT GAIN SELECTION

Optional - for advanced users.

The OP5340 module has user selectable input attenuation ability. By default, the maximum input voltage range is set to ± 20 volts but each channel can be changed separately up to ± 120 volts. The OP5340 module contains resistor networks that allow insertion of additional precision resistors to change the input attenuation. The image on the right shows the placement for the additional resistors.

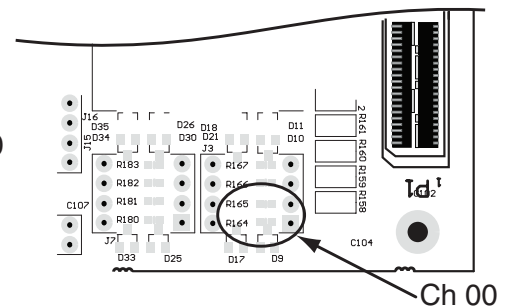

Please refer to the table at the end of this section for the exact relationship between channels and resistors.

The next diagram illustrates the input stage of one channel. The default values for resistors R1 and R2 were chosen to keep the maximum input voltage range of ± 20 volts (40 volts) with no additional resistors.


Vin full range = ± 20 volts

Vout full range = ± 1 volt (2 volts)


Installed resistors: **R1** = 499 k Ω
R2 = 25 k Ω

Vout Formula

$$V_{out} = \left(\frac{R2}{R1} \right) V_{in}$$

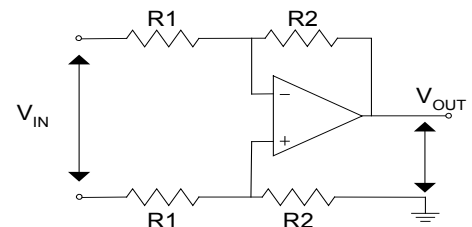

The factory installed surface mount resistors on the OP5340 module give an attenuation of 20.

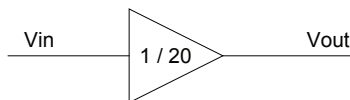

INPUT GAIN CALCULATIONS

The figures below show the complete circuit with resistor Rx as the axial insertable resistor by the user.

Input Gain Schematic with Rx

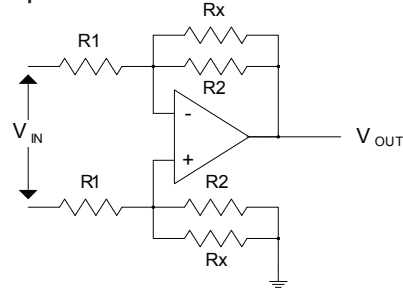


Figure 23: Input gain with Rx

Vout Formula with Rx

$$V_{out} = \left(\frac{R2}{R1} \right) \left(\frac{Rx}{R2 + Rx} \right) V_{in}$$

Vout Formula, with Default R Values and Rx

R1= 499K, R2= 25K

$$V_{out} = \frac{1}{20} \left(\frac{Rx}{25 + Rx} \right) V_{in}$$

Figure 24: Vout formulas

Users may define the input gain value and calculate the corresponding Rx resistor value.

Table 4 provides maximum range values and associated Rx resistor values (chosen in 0.1% series range). To yield the same unit of measurement, the model must compensate for any new gain value different from the original gain of 1/20. The last column provides the gain to insert in the input signal of the simulation model.

Input gain	Max voltage input	Rx value 0.1% series range	Gain to insert in the model
1/20	±20V (or 40V)	none	1
1/40	±40V (or 80V)	24.9 kΩ	2
1/60	±60V (or 120V)	12.4 kΩ	3
1/80	±80V (or 160V)	8.25 kΩ	4
1/100	±100V (or 200V)	6.20 kΩ	5
1/120	±120V (or 240V)	4.99 kΩ	6

Table 4: Maximum Range and Resistor Values

Example: an added Rx resistor of 4.99 kΩ in parallel with R2 resistor gives an attenuation of approximately 120 so the input voltage can be increased to ±120 volts (or 240 volts).

Table 5 shows the relationship between channel and resistor references used for the input gain changes.

Channel #	Resistor Rx	Channel #	Resistor Rx
Channel 00	R164, R165	Channel 08	R172, R173
Channel 01	R180, R181	Channel 09	R188, R189
Channel 02	R166, R167	Channel 10	R174, R175
Channel 03	R182, R183	Channel 11	R190, R191
Channel 04	R168, R169	Channel 12	R176, R177
Channel 05	R184, R185	Channel 13	R192, R194
Channel 06	R170, R171	Channel 14	R178, R179
Channel 07	R186, R187	Channel 15	R193, R195

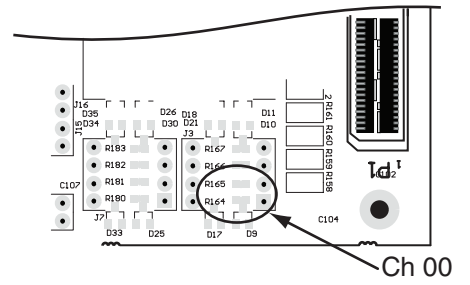


Table 5: Resistor Network Channel Identification


OP7353 DIGITAL MONITORING BOARD

DESCRIPTION

The OP7353 is a part of the optional modules for OPAL-RT's OP7000 simulator. It provides a monitoring interface for both digital input and output boards OP7812 and OP7813 mounted in the back section of the OP7000.

The OP7353 is optional and is used only when monitoring of digital signals is required. It is not a requirement to use the OP7812 and OP7813 digital signal conditioning boards, at the rear section of the OP7000.

CIRCUIT LAYOUT DIAGRAMS

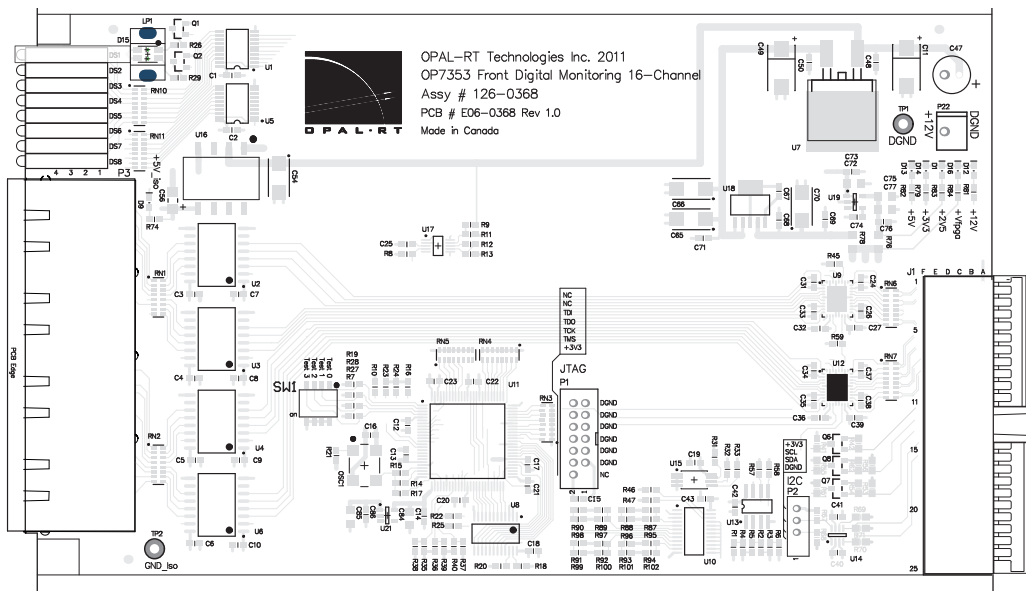

OP7811 PASSTHROUGH MODULE

DESCRIPTION

The OP7811 is designed to provide a direct link between the front OP7220 (with mezzanine) and the rear DB37 connector. This allows signals from the front conditioning board to be directly linked with the external device without further processing or conditioning.

INSTALLATION

The OP7811 Passthrough module must be inserted at the back of the OP7000 simulator, making sure that the board is properly aligned using the guide tracks before pressing into place. Make sure that the board is in the appropriate slot, connecting it to the appropriate signal conditioning monitoring board (OP7220 with either an OP5330 or OP5340 mezzanine) in the front of the simulator.

CIRCUIT LAYOUT DIAGRAM

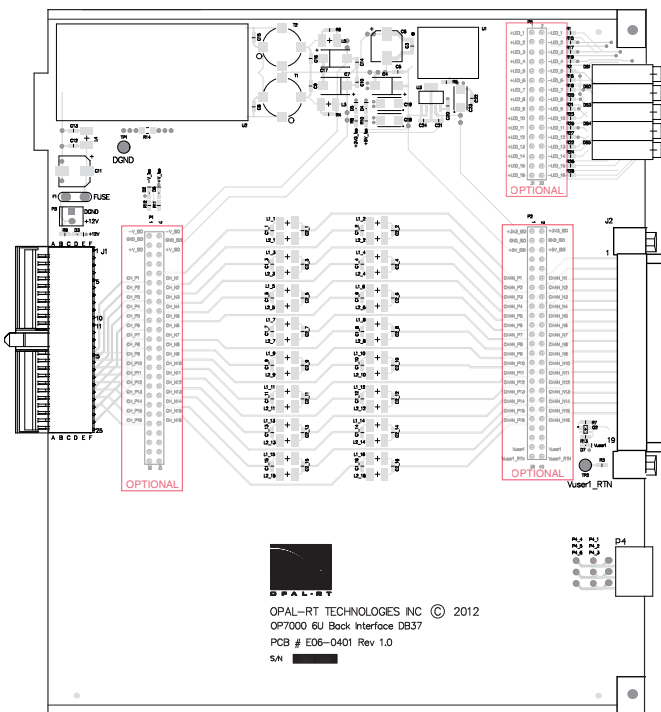


Figure 1: OP7811 passthrough module

CONNECTOR PIN ASSIGNMENTS

DB37 Connector	Channel	DB37 Connector	Channel	
1	+IN00	20	-IN00	
2	+IN01	21	-IN01	
3	+IN02	22	-IN02	
4	+IN03	23	-IN03	
5	+IN04	24	-IN04	
6	+IN05	25	-IN05	
7	+IN06	26	-IN06	
8	+IN07	27	-IN07	
9	+IN08	28	-IN08	
10	+IN09	29	-IN09	
11	+IN10	30	-IN10	
12	+IN11	31	-IN11	
13	+IN12	32	-IN12	
14	+IN13	33	-IN13	
15	+IN14	34	-IN14	
16	+IN15	35	-IN15	
17		36		
18		37		
19				

Table 1: Pin Assignments

SPECIFICATIONS

Product name	OP7811
Part number	126-0401
Product type	OP7000 back passthrough board
Number of channels	Up to 16, depending on front mezzanine
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
I/O connector	DB37F (in from client side) per board
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

OP7816 16 DIN SIGNAL CONDITIONING MODULE

DESCRIPTION

The OP7816 is designed for use with the OP7000, OPAL-RT's state of the art HIL (Hardware-In-the-Loop) simulator. The OP7816 provides 16 digital input signals with specific voltage conditioning. The optical isolation of the OP7816 inputs make it ideal for environments where electrical isolation is required.

The OP7816 features 16 optically isolated input channels. All are sampled simultaneously for additional simulation accuracy. It is perfectly suited to interface real life environment signals to the RT-LAB simulator, providing electrical isolation.

FEATURES

- 16 optically isolated input channels.
- All inputs are sampled simultaneously, at up to 10 MSPS.
- 3V to 30V input voltage range.
- 30V maximum reverse protection

INSTALLATION

The OP7816 digital input signal conditioning module must be inserted at the back of the OP7000 simulator, making sure that the board is properly aligned using the guide tracks before pressing into place. Make sure that the board is in the appropriate slot, connecting it to the appropriate signal conditioning monitoring board in the front of the simulator.

The faceplate provides a DB37 connector (see "connector pin assignments" for details).

MODULE IDENTIFICATION AND INITIALISATION

The I2C communication link allows the FPGA to recognize the slot into which the board is inserted and what type of board is inserted (digital in, digital out, analog in, analog out, etc.)

CIRCUIT LAYOUT DIAGRAM

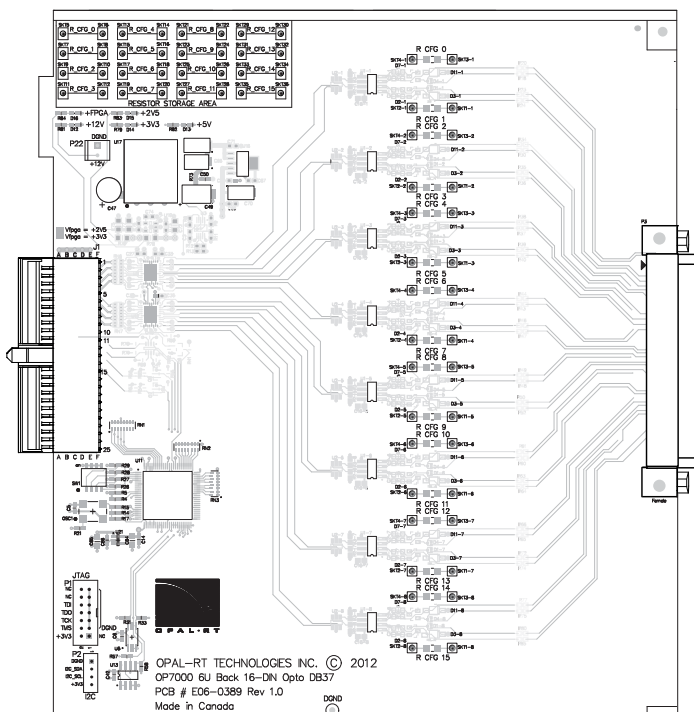


Figure 1: OP7816 digital signal conditioning module

INPUT INTERFACES

The optically isolated inputs accept a wide input voltage range, from 5 to 50 Volts, according to user requirements. The OP7816 has a limited current of 3.6 mA. Each input has a reverse voltage protection of up to 30 volts provided by a diode.

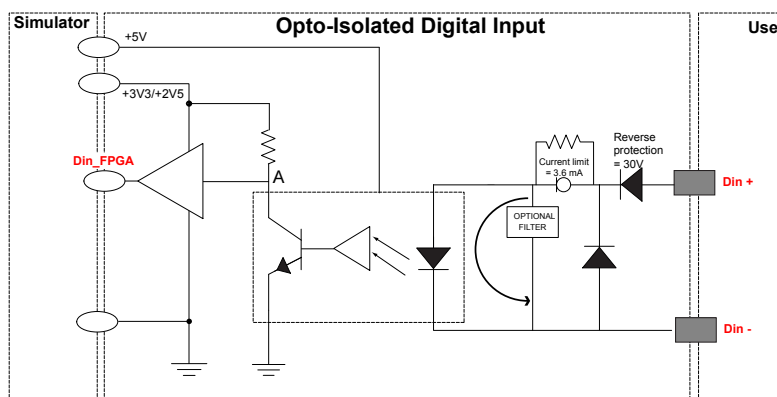


Figure 2: OP7816 Isolated digital input drawing

The signal conditioning module inputs have both anode and cathode sides available to the user (on the I/O connector).

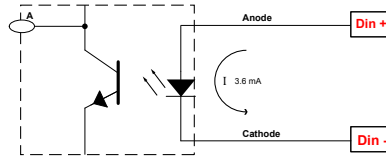


Figure 3: Both Din + and Din - are available to the user

When current flows from Din+ to Din -, the output of opto-coupler A is **low** and the Din_FPGA signal is **low**. When no current flows, the opto-coupler output A is **high** and the Din_FPGA signal is **high**.

TYPICAL APPLICATIONS

The diagrams below illustrate typical application examples.

The digital input circuit needs a 5 V supply source to power the onboard circuitry. This source is connected to the computer's 5 VDC.

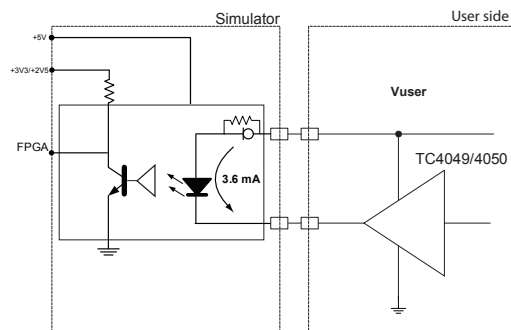


Figure 4: Typical digital input circuit

To work properly, the OPAL-RT digital input is current limited to 3.6 mA.

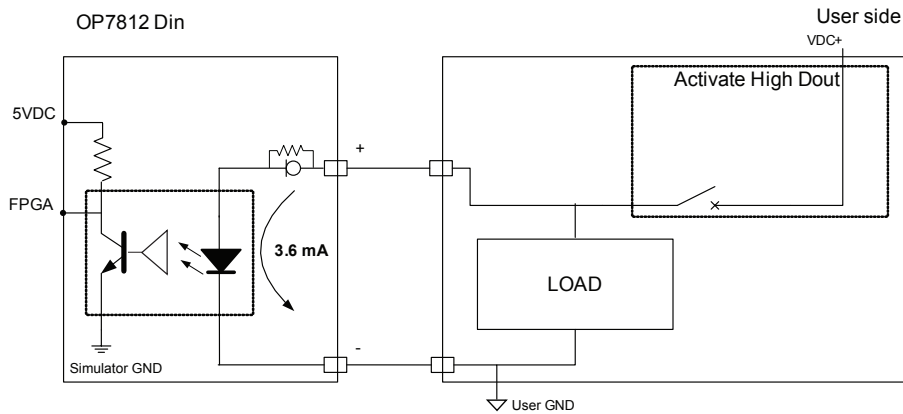


Figure 5: Typical high side activation (user high Dout)

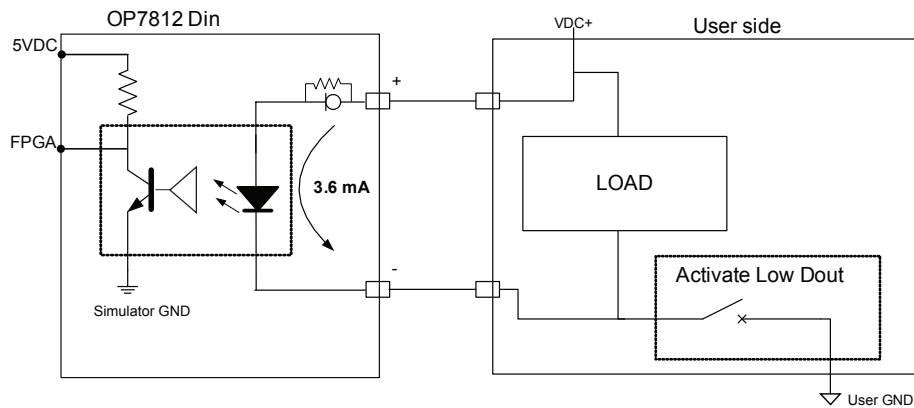


Figure 6: Typical low side activation (user low Dout)

CONNECTOR PIN ASSIGNMENTS

DB37 Connector	Channel	DB37 Connector	Channel	
1	+IN00	20	-IN00	
2	+IN01	21	-IN01	
3	+IN02	22	-IN02	
4	+IN03	23	-IN03	
5	+IN04	24	-IN04	
6	+IN05	25	-IN05	
7	+IN06	26	-IN06	
8	+IN07	27	-IN07	
9	+IN08	28	-IN08	
10	+IN09	29	-IN09	
11	+IN10	30	-IN10	
12	+IN11	31	-IN11	
13	+IN12	32	-IN12	
14	+IN13	33	-IN13	
15	+IN14	34	-IN14	
16	+IN15	35	-IN15	
17		36		
18		37		
19				

Table 1: Pin Assignments

SPECIFICATIONS

Product name	OP7816
Part number	126-0389
Product type	OP7000 back 16 Din opto-isolated board
Number of channels	16 digital inputs
Isolation	Optical isolator
Input current	12 Vcc @ 1.5A
Maximum reverse voltage protection	30 Volts
Bandwidth	500 kHz
Voltage range	0 to 5 Vcc or 5 to 50 Vcc
Delay Low-to-High (minimum)	≈ 40 ns
Delay High-to-Low (maximum)	≈ 75 ns
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
I/O connector	DB37F (in from client side) per board
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

OP7817 16 DOUT SIGNAL CONDITIONING MODULE

DESCRIPTION

The OP7817 provides 16 push-pull digital output signals with specific voltage conditioning. All outputs are updated individually by the OP7000 FPGA outputs with a maximum time delay of less than 75 nanoseconds.

FEATURES

- 16 opto-isolated output channels.
- All channels are controlled individually by the FPGA with a resolution of 10 nanoseconds and a maximum delay of 75 nanoseconds.
- All outputs support voltage up to 30V and the output current is up to 100mA in push-pull mode.

INSTALLATION

The OP7817 digital output signal conditioning module must be inserted into the back of the OP7000 simulator, making sure that the board is properly aligned, using the guide tracks, before pressing into place.

Make sure that the board is in the appropriate slot, considering the model and bitstream loaded in the FPGA. An optional signal monitoring board can be connected in the front of the simulator (see the OP7000 User Manual for details).

MODULE IDENTIFICATION AND INITIALISATION

The I2C communication link allows the FPGA to recognize the slot into which the board is inserted and what type of board is inserted (digital in, digital out, analog in, analog out, etc.).

The diagram below illustrates the circuit.

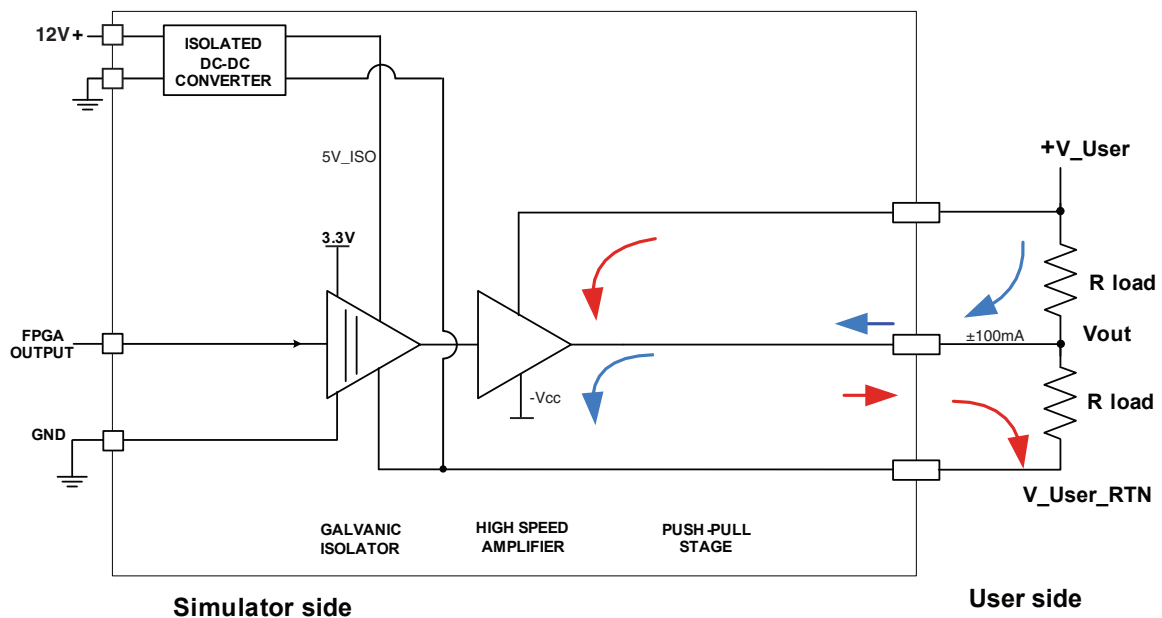


Figure 1: Typical Push-Pull circuit diagram

CIRCUIT BOARD LAYOUT DIAGRAMS

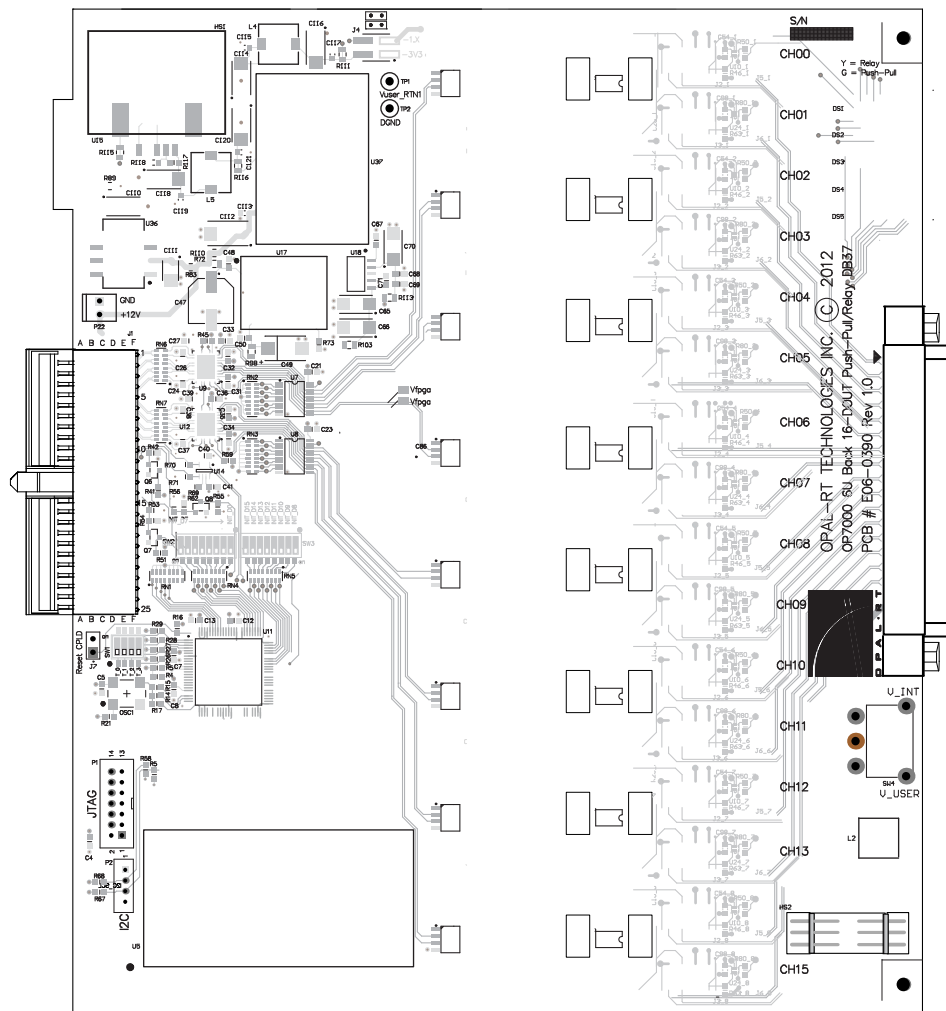


Figure 2: OP7817 Digital Signal Conditioning Module

OP7817 PIN ASSIGNMENTS

DB37 CONNECTOR

DB37 Connector	Channel	DB37 Connector	Channel	
1	+IN00	20	-IN00	
2	+IN01	21	-IN01	
3	+IN02	22	-IN02	
4	+IN03	23	-IN03	
5	+IN04	24	-IN04	
6	+IN05	25	-IN05	
7	+IN06	26	-IN06	
8	+IN07	27	-IN07	
9	+IN08	28	-IN08	
10	+IN09	29	-IN09	
11	+IN10	30	-IN10	
12	+IN11	31	-IN11	
13	+IN12	32	-IN12	
14	+IN13	33	-IN13	
15	+IN14	34	-IN14	
16	+IN15	35	-IN15	
17		36		
18		37		
19				

GENERAL SPECIFICATIONS

Product name	OP7817
Part number	126-0390
Product type	OP7000 back 16 DOUT push-pull
Number of channels	16 digital outputs
Isolation	opto-isolator
Output Current max	±100 mA continuous (shared between 2 consecutive outputs, see opposite)
Output Protection	Reverse Bat/Overvoltage protection (33V)/short-circuit protection
Output Voltage range	3.3V to 30 Vdc
Vuser (external)	5 Vdc to 30 Vdc
Delay Low-to-High	65 ns (with 500Ω load)
Delay High-to-Low	65 ns (with 500Ω load)
Rise/Fall times	50 ns (with 500Ω load)
Bandwidth	500 kHz
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
I/O connector	DB37 (in from client side) per board
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

ELECTRICAL SPECIFICATIONS

The measurements provided below are for typical Vuser, but the board can also operate between the specified ranges.

5 V Option

5 Vuser	Conditions	MINIMUM	TYPICAL	MAXIMUM	UNITS	MODE
High Level	RL (1 kohm)	3	3.4		VDC	Pull Down
	Iout source max* 80 mA	2.2	2.8		VDC	
Low Level	Iout sink max* 80 mA			0.2	VDC	Pull Up

12 V Option

12 Vuser	Conditions	MINIMUM	TYPICAL	MAXIMUM	UNITS	MODE
High Level	RL (1 kohm)	10	10.4		VDC	Pull Down
	Iout source max* 100 mA	8.4	9.4		VDC	
Low Level	Iout sink max* 100mA			0.2	VDC	Pull Up

24 V Option

24 Vuser	Conditions	MINIMUM	TYPICAL	MAXIMUM	UNITS	MODE
High Level	RL (1 kohm)	21.7	22.4		VDC	Pull Down
	Iout source max* 100 mA	20.4	21.4		VDC	
Low Level	Iout sink max* 100mA			0.2	VDC	Pull Up

*One current shared on the same chip that supplies 2 channels, therefore it represents the maximum current for 2 Dout. For example, 100mA shared between 2 channels could be distributed as follows:

- Dout 1 and Dout 2 at 50mA each
- Dout 1 at 80mA and Dout 2 at 20mA
- Dout 1 at 0mA and Dout 2 at 100mA

The eight (8) chips on the OP7817 board each supply two channels, as shown:

- Channels 0 and 1
- Channels 2 and 3
- Channels 4 and 5
- Channels 6 and 7
- Channels 8 and 9
- Channels 10 and 11
- Channels 12 and 13
- Channels 14 and 15



Dout high levels may only be adjusted to suit desired user high level IF the application has a variable vuser.

OP7818 16 AIN SIGNAL CONDITIONING MODULE

DESCRIPTION

The OP7818 is designed for use with the OP7000, OPAL-RT's state of the art HIL (Hardware-In-the-Loop) simulator. The OP7818 features 16 analog input channels. It is perfectly suited to interface simulator signals to real-life environment signals, providing electrical isolation.

FEATURES

- 16 high impedance isolated input channels
- Input differential impedance of 20 MOhms per channel.
- Input single side impedance of 10 MOhms.
- All inputs accept voltage of up to 400V, with proper jumper settings.
- Selectable voltage/current modes
- Input current mode ± 20 mA

INSTALLATION

The OP7818 analog input signal conditioning module must be inserted into the back of the OP7000 simulator, making sure that the board is properly aligned, using the guide tracks, before pressing into place.

Make sure that the board is in the appropriate slot, connecting it to the appropriate signal conditioning/monitoring board in the front of the simulator (see the OP7000 User Manual for details).

Once installed, the faceplate provides a DB37 connector (see "connector pin assignments" for details) and a series of status LEDs. Each LED represents a channel (as shown in the table); if the LED is green, it indicates that the channel is in Voltage mode. If the LED is orange ("Y" on faceplate), the channel is in Current mode.

LED - Channel assignments			
0	1	2	3
4	5	6	7
8	9	10	11
12	13	14	15
n/a	n/a	n/a	n/a

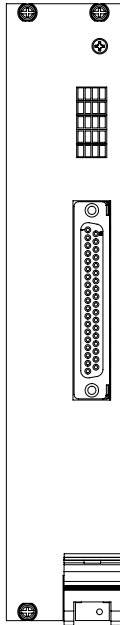


Table 1: Back 6U board LEDs

MODULE IDENTIFICATION AND INITIALISATION

The L2C communication link allows the FPGA to recognize the slot into which the board is inserted and what type of board is inserted (digital in, digital out, analog in, analog out, etc.).

CIRCUIT LAYOUT DIAGRAMS

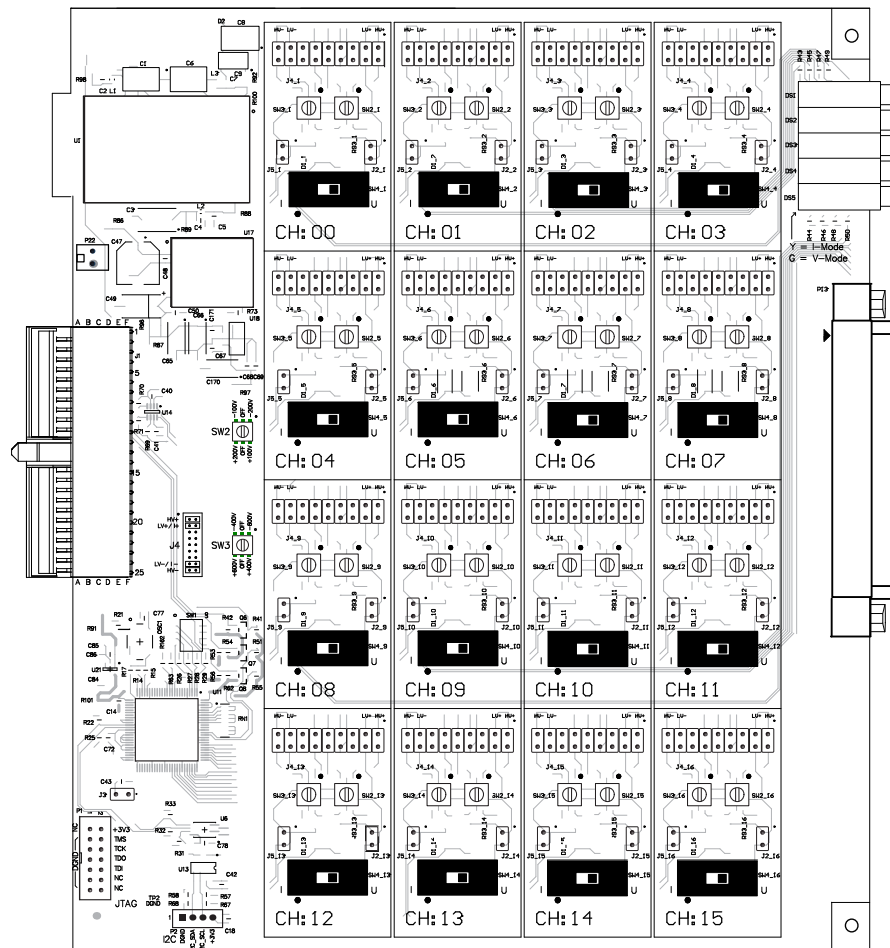


Figure 1: P7818 board

JUMPER AND SWITCH POSITIONS

Each channel has a series of jumpers and switches, seen in Figure 2, that enable on-board mode selection (voltage or current) and, subsequently, voltage range configurations. Each element enables a function that allows setting a very precise configuration for the OP7818 board.

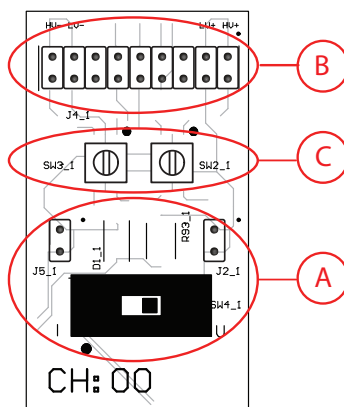


Figure 2: OP7818 jumpers

A. Mode Selection


Switch (SW4) lets you place the board in either voltage or current mode. Slide the switch to the right (towards U) to set the channel to Voltage mode or to the left (toward I) to set the channel to Current mode..



Voltage Mode

B. Voltage Level Selection


Low voltage* or Current mode: the jumpers must be on pins 3/4 and 15/16. Voltage range selectors must be in OFF positions.

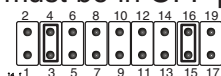

High voltage mode: the jumpers must be on pins 1/2 and 17/18. Voltage range selectors (SW2 and SW3) must be set according to the desired voltage. (see list C below).

C. Voltage Range Selection

To obtain +/- 20V, both the SW3 and SW2 screws must be in the OFF position.

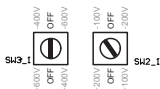

To obtain 100V, the SW2 screw must be in the +/-100V position and SW3 in the OFF position

To obtain 200V the SW2 screw must be in the +/-200V position and SW3 in the OFF position

To obtain 400V, the SW2 screw must be in the OFF position and SW3 in the +/-400V position

To obtain 600V the SW2 screw must be in the OFF position and SW3 in the +/-600V position

OPTIONAL MEZZANINE BOARD

When working in low voltage mode, the Ain Resistive Sensor mezzanine can be used to take temperature measurements using either a thermistor or a resistive sensor.

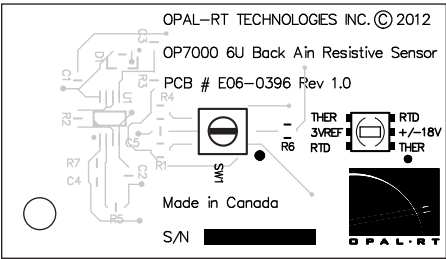


Figure 3: Resistive Sensor adaptor mezzanine

D. Mezzanine Mode Selection

Mode	Screw Position	Resistor Description	
+/-18V 3VREF	Off	If the AIN board is using the resistive sensor module, it can acquire analog signals up to +/-3V which are then amplified to +/-18V	<div>THER 3VREF RTD</div> <div></div> <div>RTD +/-18V THER</div>
RTD	+/-100V	pull-up=2.05KOhm	<div>THER 3VREF RTD</div> <div></div> <div>RTD +/-18V THER</div>
Thermistor	+/-200V	pull-up=3.32Kohm one pull-down=47.5KOhm	<div>THER 3VREF RTD</div> <div></div> <div>RTD +/-18V THER</div>

TYPICAL APPLICATION DIAGRAMS

VOLTAGE MODE DIAGRAM

The following diagram applies when the board is set to operate in Voltage mode: jumpers are on pins 3/4 and 15/16 (J4) and SW2 and SW3 screws are in off position and switch SW4 is in Voltage mode (position U).

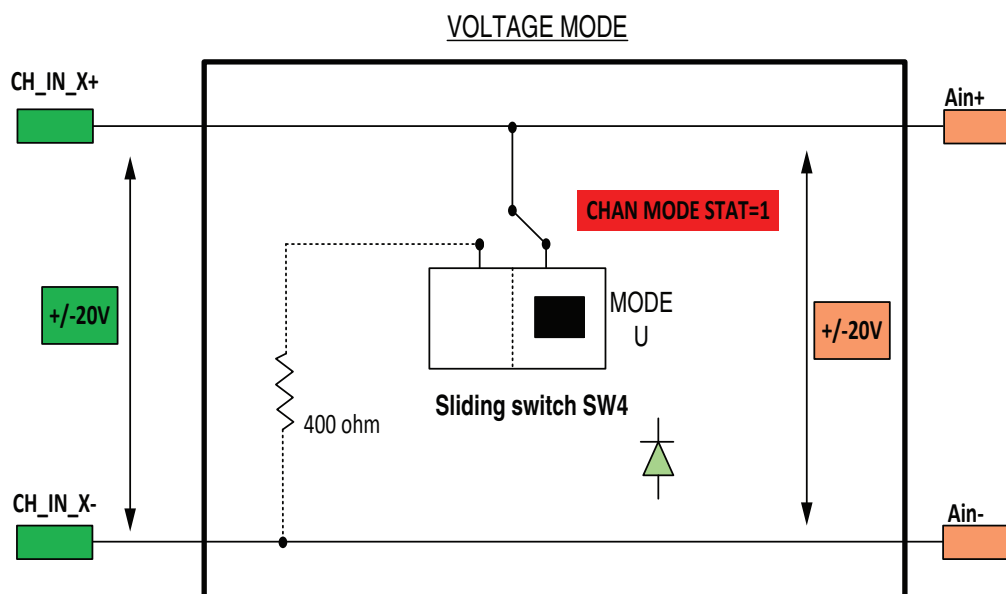


Figure 4: Voltage mode diagram

CURRENT MODE DIAGRAM

The following diagram applies when the board is set to operate in Voltage mode: jumpers are on pins 3/4 and 15/16 (J4) and SW2 and SW3 screws are in off position and switch SW4 is in Current mode (position I).

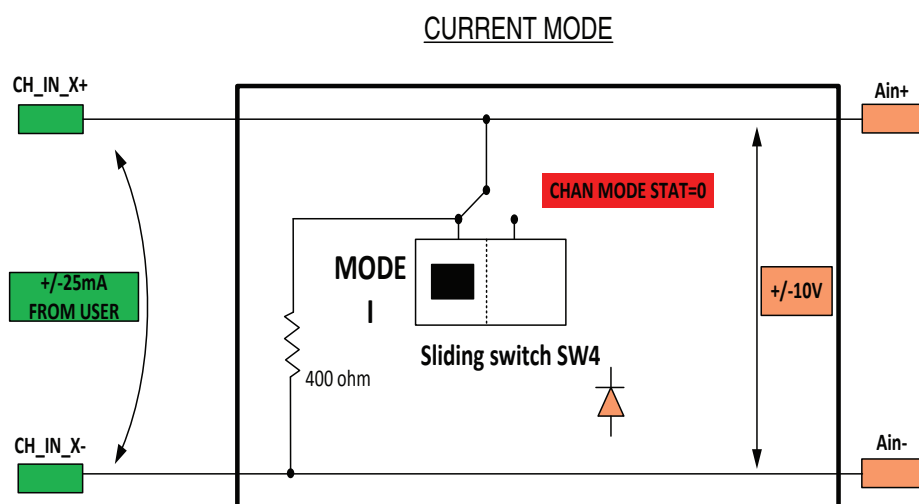


Figure 5: Current mode diagram

Resistive Sensor Mode Diagram

The following diagram applies only when the optional Resistive Sensor mezzanine board is in place.

Using the screw (SW1) on the mezzanine board, the OP7818 can be set to operate with a thermistor or resistive sensor. Note that with the mezzanine board in place, there can be no jumpers on pins for jumper array (J4) and SW2 and SW3 screws must be in the off position and switch SW4 is in Current mode (position I).

In Resistive sensor mode, the screw must be turned to the left, to RTD.

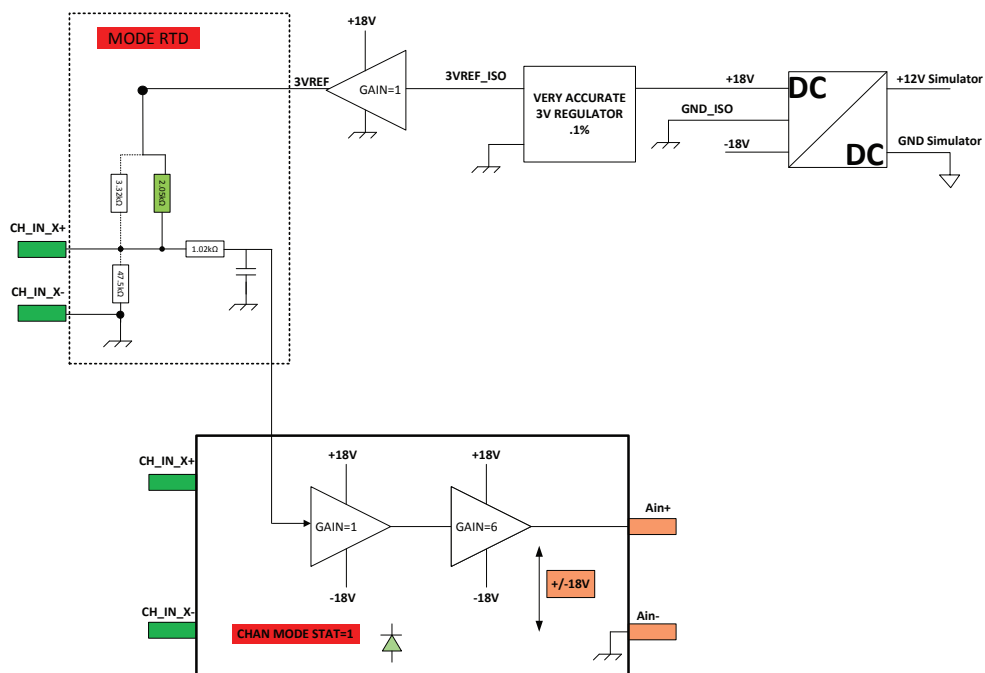


Figure 6: Resistive sensor mode diagram

In Thermistor mode, the screw must be turned to the right, to THER.

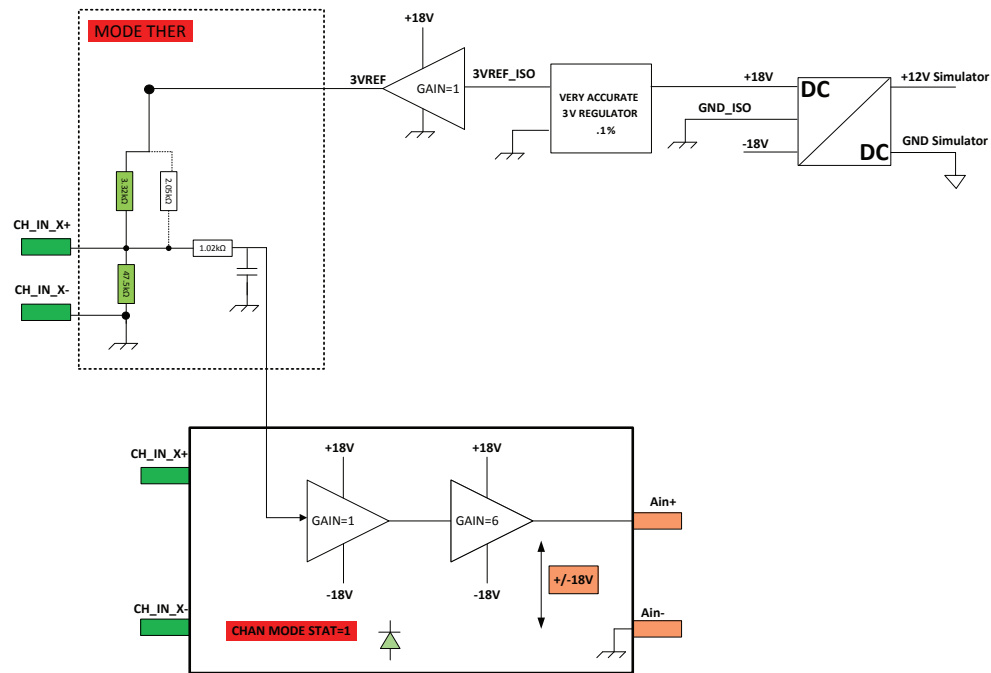


Figure 7: Thermistor mode diagram

CONNECTOR PIN ASSIGNMENTS

DB37 Connector	Channel	DB37 Connector	Channel	
1	+IN00	20	-IN00	
2	+IN01	21	-IN01	
3	+IN02	22	-IN02	
4	+IN03	23	-IN03	
5	+IN04	24	-IN04	
6	+IN05	25	-IN05	
7	+IN06	26	-IN06	
8	+IN07	27	-IN07	
9	+IN08	28	-IN08	
10	+IN09	29	-IN09	
11	+IN10	30	-IN10	
12	+IN11	31	-IN11	
13	+IN12	32	-IN12	
14	+IN13	33	-IN13	
15	+IN14	34	-IN14	
16	+IN15	35	-IN15	
17		36		
18		37		
19				

Table 2: Pin Assignments

SPECIFICATIONS

Product name	OP7818
Part number	126-0391
Product type	OP7000 back 16 Ain
Number of channels	16
Input modes	Voltage or Current
Isolation	Provided by OP7000
Maximum Current	±25 mA
Maximum voltage	±20 V
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
I/O connector	DB37 (in from client side)
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

OP7832 SYNCHRONIZATION MODULE

DESCRIPTION

The OP7832 is designed for use with the OP7000, OPAL-RT's state of the art HIL (Hardware-In-the-Loop) simulator. It provides connection interfaces for OPAL-RT's synchronization signal.

The module supports both legacy and composite synchronization signals:

In legacy mode, the synchronization signal is a pulse train. Each pulse is synchronized with the start of the RT-LAB model's calculation step. This synchronization makes it possible to simultaneously align calculation steps from several chassis and trigger I/O acquisition. The legacy mode is supported by most OPAL-RT products (Wanda, OP4500, OP4510, OP5600, OP5607, OP7000 and OP7020).

In composite mode the synchronization signal is superimposed with another pulse train, which is aligned to the inner FPGA calculation step. This mode is supported only by newer OPAL-RT products (like OP7000, OP7020 and OP5607, OP4500 and OP4510). Support for OP5600 is under development.

The composite mode uses plastic fiber optic cables and Avago Rx/Tx transceivers. The OP7000 chassis also supports composite mode on copper cables with HD15 connectors

The synchronization signal is a daisy-chain signal: each module has an OUT and an IN port. When a simulation is distributed among several systems, the model defines which system is the synchronization Master, i.e the system from which the synchronization signal will originate. The other systems will then be set in Slave mode by the model.


The daisy-chain must connect the OUT port of the Master to the IN of the first Slave, and then connect OUT port of the Slave to the IN port of the next Slave, etc.

In most OPAL-RT products, the whole daisy-chain must use the same type of synchronization signal, either legacy mode, or composite mode. The OP7000 offers an additional option to combine legacy and composite modes in the same distributed simulation: the OP7000 can receive a legacy signal and output the signal in composite mode via the HD15F connectors. This allows high precision multi-FPGA simulation to be distributed between several OP7000 chassis.

The OP7000 chassis can hold up to four OP7161 Virtex6 FPGA cards. The Primary FPGA can be set as Master or Slave in the model, the Secondary FPGAs are always Slave to the Primary FPGA. They receive the synchronization signal via the backplane of the chassis

FEATURES

- 8 status LEDs
- 2 HD15F connectors (for composite mode).
- 2 copper stereo jack connectors (to synch with OP5600).
- 2 fiber optic sync-composite connectors.
- 2 Hex encoders
- On-board Master or Slave mode selection.

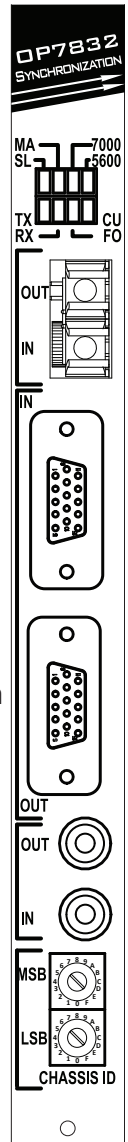

INSTALLATION

The OP7832 synchronization module must be inserted at the back of the OP7000 simulator, making sure that the board is properly aligned using the guide tracks before pressing into place.


Make sure that the board is in the appropriate slot, F2 (red rails) to the right of the PCIe board.

USER INTERFACES

The front interface provides a series of connectors and 8 status LEDs.

 




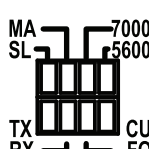









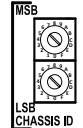
STATUS LEDS

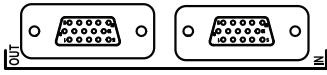There are 8 LEDs that indicate the statuses of the various functions:

Function ID	Function Name	Description	
SL	SLAVE	ON, means all the FPGA in the chassis are in Slave Mode	
MA	MASTER	ON, means that the primary FPGA in the chassis is in Master Mode	
5600	OP5600	ON, in a mixed network, that the SYNC input signal comes from one OP5600 or other legacy-compatible chassis	
7000	OP7000	ON, in a mixed network, means that the SYNC input signal comes from one OP7000 chassis	
TX	TX_ACTIVE	ON means SYNC pulses are present on the transmit Line	
RX	RX_ACTIVE	ON means SYNC pulses are present on the receive Line	
CU	CU	ON means SYNC input signals is provided on the HD15 or audio connector	
FO	FO	ON means SYNC input signal is provided on the optical fiber connector	

CONNECTORS

The first three connectors determine which of three (3) types of synchronization is used. Each connector is linked to two switches on the board, as shown in the table below. The last connector lets users select a chassis ID.

Connector type	Description	Connector	Switch settings
Fiber Optic	<p>Fiber optic cable to connect an OP7000 to an OP7000. Fiber optic provides greater reliability over long distances.</p> <p>Use cable: 5M FIBER OPTIC CBL (OPAL PN 213-0200-0420)</p>		<p>SW4 COPPER  FIBER </p> <p>SW3 OP7000  OP5600 </p>
HD15	<p>HD15, or copper, cables are used to connect OP7000 to OP7000. These cables transport 4 pairs of synchronization signals from the FPGA and from the models. These are standard HD, pin to pin cables.</p> <p>Use cable: 6' High Resolution Coax VGA Cable (HD15 M/M) (OPAL PN 213-0100-0416)</p>		<p>SW4 COPPER  FIBER </p> <p>SW3 OP7000  OP5600 </p>
Stereo Jack	<p>Stereo jack connectors are used to connect OP7000 to an OP5600.</p> <p>Use cable: AUDIO CONN CABLE ASSY 3.5MM M/M 6FT (OPAL PN 213-0100-0316)</p>		<p>SW4 COPPER  FIBER </p> <p>SW3 OP7000  OP5600 </p>
Hex Encoders	<p>Lets users select chassis ID in a network through two rotary, 16 position binary encoders, which can be set from 00 to FF (in HEX), for a minimum of 256 addresses.</p> <p>The chassis ID selected here MUST match the ID given in the Simulink controller block.</p>		N/A

These configurations will be factory set according to customer specifications at time of order.

CIRCUIT LAYOUT DIAGRAM

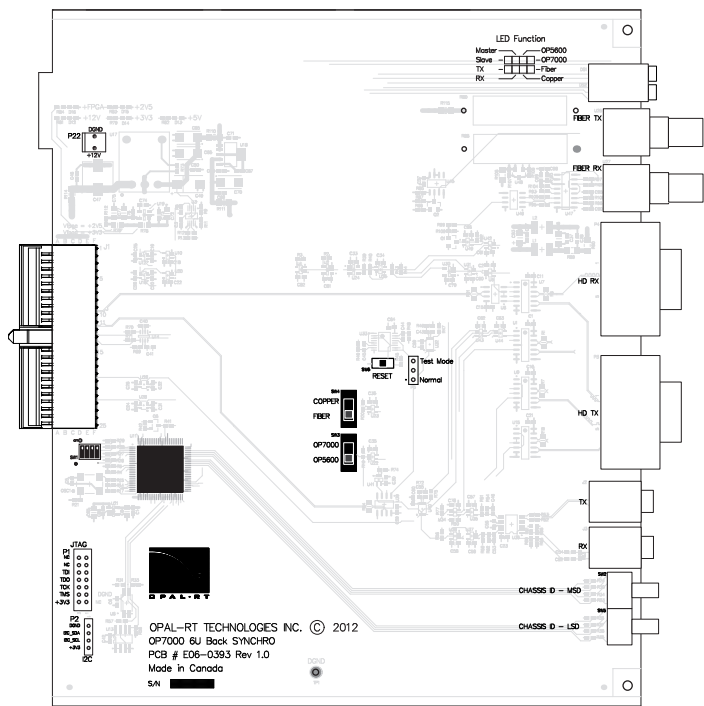


Figure 8: OP7832 digital signal conditioning module

Jumper P5 defines whether the board is in Normal or Test mode. This jumper is factory configured to the appropriate setting. DO NOT change the setting.

WARNING Note that the pushbutton switch SW6 is a reset switch. It is reserved for OPAL-RT’s technician use only. Changing this jumper setting may damage the board.

SPECIFICATIONS

Product name	OP7832
Part number	126-0393
Product type	OP7000 synchronization board
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

SPECIFICATIONS

OP7000 SIMULATOR SPECIFICATIONS

Product name	OP7000 Simulator
Power supply	Universal input and active power factor correction 650W continuous power DC to DC converters for analog voltage
I/O connectors	BNC on rear conditioning modules
Monitoring connectors	RJ45 on front modules RJ45 and mini-BNC on OP7000 front panel
Dimensions (HxWxD)	26.67 x 48.26 x - cm (10.5" x 19" x ")
Weight	9 to 14 Kg, depending on options installed.
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90% non-condensing
Maximum altitude	2000 m (6562 ft.)

OP5330 DIGITAL TO ANALOG CONVERTER

This board is a type B mezzanine board and must be installed on an OP7220 to be used with the OP7000 simulator.

Product Name:	OP5330
Part Number:	126-0157
Product type	Type B mezzanine, 16 analog out, 1 MSPS
Number of channels:	16 single-ended
Resolution:	16 bits
Default range:	± 16 Volts
Maximum current:	± 15 mA
Max. Sampling Frequency:	1 MSPS
Min Conversion / Acquisition Time:	1 µs per channel
DAC Type:	8 x Dual DAC with 10 MBit/s Serial Output Transfer
CMRR:	100 dB
Maximum noise:	20 mV peak-to-peak
Maximum offset:	± 10 mV after calibration
Recommended warm-up time:	5 min.
Calibration interval:	as required
Dimensions:	6.60 cm x 12.50 cm (2.6" x 4.92")
I/O connector:	80-pin high speed header to carrier
Environmental	
Operating temperature:	10 to 40 °C
Storage temperature:	-55 to 85 °C
Relative humidity:	10 to 90%, non condensing
Maximum altitude:	2,000 m (6562 ft.)

Specifications

OP5340 Analog to Digital Converter

OP5340 ANALOG TO DIGITAL CONVERTER

This board is a type B mezzanine board and must be installed on an OP7220 to be used with the OP7000 simulator.

Product Name:	OP5340	
Part Number:	0126-112	
Product type	Type B mezzanine, 16 analog in, 500 KSPS	
Number of channels:	16 differential	
Resolution:	16 bits	
Max. Sampling Frequency:	500 KSPS	
Min Conversion / Acquisition Time:	2 μs per channel	
ADC Type:	8 x Dual ADC with 50 MBit/s Serial Output Transfer	
Nominal Input Ranges (V)		
(input range selection provided by on-board plug-in resistors)	Positive Full Scale	Negative Full Scale
	+120.0	-120.0
	+100.0	-100.0
	+80.0	-80.0
	+60.0	-60.0
	+40.0	-40.0
	+20.0 (hardware default value)	-20.0
No missing codes resolution:	14 bits min.	
Integral nonlinearity (INL):	±8 LSB max. (Typical: ±3 LSB)	
Differential nonlinearity (DNL):	±1.5 LSB typ. (0 to +70°C)	
CMRR:	90 dB	
Bandwidth:	Small signal (-3 dB): 820 kHz	
	Large signal (0.1% THD): 55 kHz	
System noise:	1.8 LSB rms (including quantization)	
Recommended warm-up time:	5 min.	
Calibration interval:	as required	
Dimensions:	6.60 cm x 12.50 cm (2.6" x 4.92")	
I/O connector:	80-pin high speed header to carrier	
Environmental		
Operating temperature:	10 to 40 °C	
Storage temperature:	-55 to 85 °C	
Relative humidity:	10 to 90%, non condensing	
Maximum altitude:	2,000 m (6562 ft.)	

OP7353 16 CHANNEL DIGITAL MONITORING (FRONT)

Product name	OP7353
Part number	126-0368
Product type	OP7000 front 16 channel digital monitoring board
Number of channels	16
Isolation	Optical isolator
Input current	3.6 mA, current limiting diode
Reverse voltage protection	Schottky diode
Maximum reverse voltage protection	30 Volts
Detection threshold	Separate Schmitt Trigger
Voltage range	5 to 100 Vdc
Delay Low-to-High	110 ns
Delay High-to-Low	60 ns
Rise/Fall times	6 ns/6 ns
Dimensions	x cm (in x in)
I/O connector	4 RJ45 (to monitoring device) per board
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

OP7812 16 DIGITAL INPUTS

Product name	OP7812
Part number	126-0369
Product type	OP7000 back 16 Din opto-isolated board
Number of channels	16 digital inputs
Isolation	Optical isolator
Connection mode	Anode and cathode available on connector
Input current	3.6 mA, current limiting diode
Reverse voltage protection	Schottky diode
Maximum reverse voltage protection	30 Volts
Detection threshold	Separate Schmitt Trigger
Voltage range	5 to 30 Vdc
Delay Low-to-High	≈ 20 ns
Delay High-to-Low	≈ 40 ns
Rise/Fall times	4 ns/4 ns
Dimensions	18.8 x 16.4 cm (7.4 in x 6.46 in)
I/O connector	16 BNC (in from client side) per board
Operating temperature	10 to 40 °C (50 to 104°F)
Storage temperature	-55 to 85°C (-67 to 185°F)
Relative humidity	10 to 90%, non condensing
Maximum altitude	2,000 m (6562 ft.)

Specifications

OP7812 16 Digital Inputs

TROUBLESHOOTING

Problem	Possible Causes	Solutions
The OP7160 board is not detected when the model is loaded	The OP7000 is not on.	Ensure that the switch at the back of the OP7000 is ON.
		Verify that the boards' LEDs are on at the front of the OP7000.
	The simulator was not turned on before the target.	Shutdown the target and repeat the "power-up procedure" on page 15. .
	The PCIe cable is not connected between the simulators and the target.	Shutdown the target and the OP7000 and repeat the "power-up procedure" on page 15.
"Timeout waiting for valid bit" messages appear when executing the model	Models linked to the OP7160 must be in XHP mode.	Reset the model, select XHP mode in the Assignment tab and restart the model.
	The model was incorrectly stopped during previous use (ex. the OP7000 was shut down with the model still running).	Reboot the target and relaunch the model.
Loading the model generates error messages concerning polling mode or multiple synchronization sources and inputs/outputs do not work when executed.	Models linked to the OP7160 must be in "Hardware Synchronized" simulation mode.	Reset the model, select Hardware Synchronized simulation mode in the Execution tab and resrat the model.
Some inputs/outputs do not work.	Incorrect connections at the rear of the OP7000.	Verify that the boards' LEDs are on at the front of the OP7000. If needed, use the RJ45 connectors and the monitoring panel to check signals. Double-check channel numbers for rear boards.
	Signal routing errors in model.	Check the model. Refer to the integration model to check what Simulink blocks to use.
	The FPGA configuration file (.conf) is not in the model's directory.	Recopy into your folder the file included with the integration model.
	Damaged board or channel.	Check the channels that are not working in the factory test report for the OP7160 prototype board. Use the integration model to test other voies function.

LIMITED WARRANTY

LIMITED WARRANTY

OPAL-RT Technologies Inc. warrants to the original purchaser and/or ultimate customer (“Purchaser”) of OPAL-RT products (“Product”) that if any part thereof proves to be defective in material or workmanship within one (1) year, such defective part will be repaired or replaced, free of charge, at OPAL-RT Technologies’ discretion, if shipped prepaid to OPAL-RT Technologies Inc. at 1751 Richardson, suite 2525, Montreal, Quebec, Canada, H3K 3G6, in a package equal to or in the original container. The Product will be returned freight prepaid and repaired or replaced if it is determined by OPAL-RT Technologies Inc. that the part failed due to defective materials or workmanship. Otherwise, the fees will be charged to the client (see article “warranty limitation and exclusion”). The repair or replacement of any such defective part shall be OPAL-RT Technologies’ sole and exclusive responsibility and liability under this limited warranty.

Purchaser must request an RMA number before shipping any Product for repair:

1. Access the OPAL-RT website (www.opal-rt.com/support/return-merchandise-authorization-rma-request), click on support and select Return Merchandise (RMA).
2. Fill out the online form and submit. You will receive a notification with a thread-ID that will be used for further exchange with support.
3. OPAL-RT’s Support department will evaluate the return and either issue an RMA number via email using the same thread-ID.
 - If the Product is returned for repair more than 12 months after purchase, the Purchaser is responsible for the cost of repair. OPAL-RT will assess the repair and prepare a quote. The RMA number will be sent with the quote.
4. Only when the Purchaser receives the RMA number, may they ship the Product, prepaid, to OPAL-RT.

RETURN POLICY

The following fees will apply when customers return products for credit:

A full credit, less a 15% fee and less return fee will only be issued if the product is in perfect working condition and if the product is returned within 1 month following the shipping date. If repairs are required on the returned product, the cost of these repairs will be deducted from the credit to be issued.

No credits will be issued beyond the one month period.

EXCLUSIONS

If third party products are part of the Product, OPAL-RT will honor the original manufacturer’s warranty.

This limited warranty does not cover consumable items, such as batteries, or items subject to wear or periodic replacement, including lamps, fuses or filter elements.

WARRANTY LIMITATION AND EXCLUSION

opal-RT Technologies will have no further obligation under this limited warranty. All warranty obligations of OPAL-RT Technologies are void if the Product has been subject to abuse, misuse, negligence, or accident or if the Purchaser fails to perform any of the duties set forth in this limited warranty or if the Product has not been operated in accordance with instructions, or if the Product serial number has been removed or altered.

DISCLAIMER OF UNSTATED WARRANTIES

the warranty printed above is the only warranty applicable to this purchase. All other warranties, express or implied, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose are hereby disclaimed.

LIMITATION OF LIABILITY

it is understood and agreed that OPAL-RT Technologies' liability, whether in contract, in tort, under any warranty, in negligence or otherwise shall not exceed the amount of the purchase price paid by the purchaser for the product and under no circumstances shall OPAL-RT Technologies be liable for special, indirect, or consequential damages. The price stated for the product is a consideration limiting OPAL-RT Technologies' liability. No action, regardless of form, arising out of the transactions under this warranty may be brought by the purchaser more than one year after the cause of actions has occurred.

CONTACT

OPAL-RT Corporate Headquarters

1751 Richardson, Suite 2525
Montréal, Québec, Canada
H3K 1G6
Tel.: 514-935-2323
Toll free: 1-877-935-2323

Technical Services

www.opal-rt.com/support

Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines.

This publication is not intended to form the basis of a contract.



OPAL-RT

UM1517141-RVN_2.0

06/2015

© OPAL-RT Technologies Inc.